



# Operator's Manual

## Model CH9030

Hillside Leveling System  
SN CH9030-22001 thru CH9030-22999

D-180913CMA01B  
September, 2021

	 <b>WARNING</b>
	<p>Read and understand operator's manual prior to operating this equipment.</p> <p>Failure to follow operation instructions could result in personal injury or damage to the equipment.</p>


Hillco Technologies, Inc. 1010 1st Ave. Nezperce, Idaho  
Phone: 800.937.2461  
[www.hillcotechnologies.com](http://www.hillcotechnologies.com)

D-180913CMA01B

# Contents

Model and Serial Number	1
Maximum Header Weights	1
Warranty Policy	2
Introduction	3
Safety	4
Safety Labels	7
Operation, Setup, and Maintenance	13
Leveling System Controls	13
Maximum Level	14
Header Trim Controls	14
4WD Alarm	15
Operator Adjustments	16
Operator Settings Menu	16
Manual Speed	17
Display Backlight	17
Smart Unload	18
Calibration	18
Joystick	19
Left/Right Clinometer Calibration (Level Zero Point)	21
Carriage Angle Left Limit	22
Carriage Angle Right Limit	23
Fore/Aft Clinometer	24
Diagnostics	25
Clinometers	25
Carriage Sensors	26
Joystick	26
Combine CAN	27
Active Alarms	27
Dealer Settings	29
Level Limit Stops	30
Leveling Controller Function	30
Mechanical Adjustments	30
Tread Width	30
Tire Selection	31
Feeder Adjustment for Tire Size	31
Conveyor Drum Fore/Aft Position	32
Header and Combine Connection	32
Rear Axle Weighting	32
Rear Axle Toe In	33
Feeder Conveyor Slip Clutch	33
Transition Drive Chain	33
Transition Slip Clutch	33
Operator's Platform	34
Ladder	35
Leveling Cylinder Safety Stops	35
General Shielding	36
Hydraulic Settings	36
Hydraulic Hoses	36
Hydraulic Cylinder	36
Grease Locations	37
Fasteners	41
Metric Torque Chart	42
Standard Torque Chart	43
Tire Inflation	44
Schematics	45
Notes	51

## Model and Serial Number

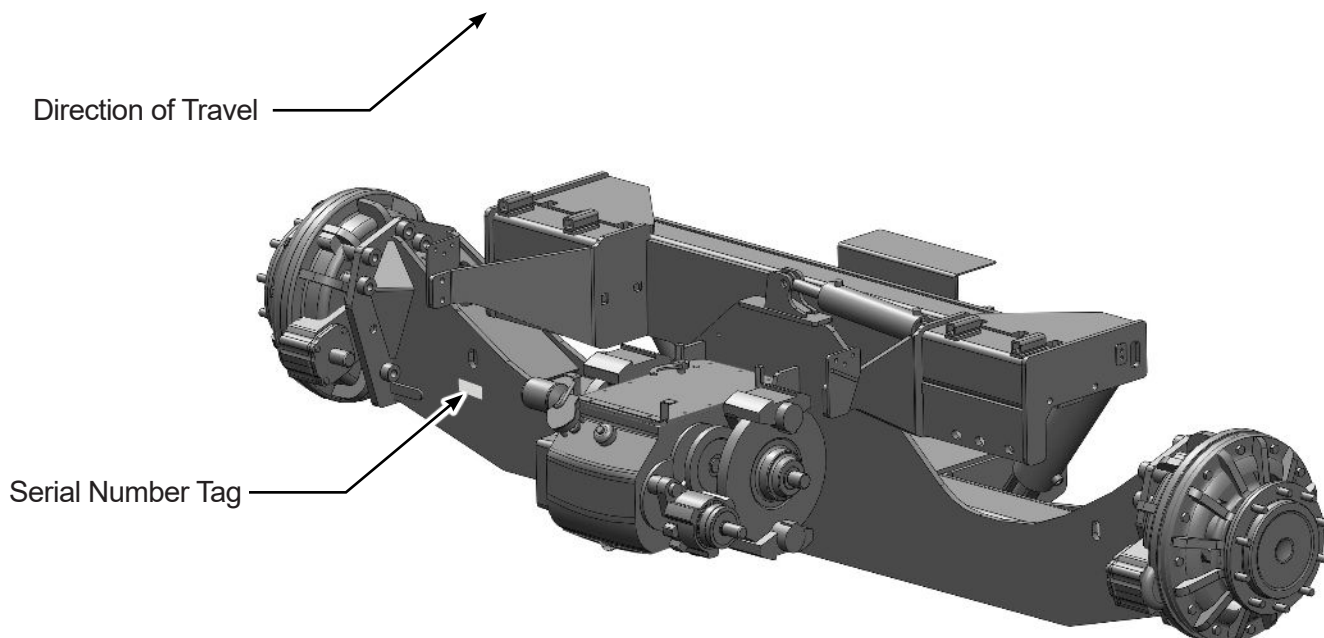

Write the serial number and the model number of the leveling system and combine on the lines provided. It is important to reference these numbers when ordering parts or requesting technical support. We suggest that you give the leveling system serial number to your Case IH dealer to be kept with their combine serial number records.

Leveling System Model Number	CH9030
Leveling System Serial Number	CH9030-
Combine Model Number	
Combine Serial Number	

## Maximum Header Weights

CH9030	8510 lbs
--------	----------

Hillco does not guarantee any non Case-IH header applications and will not be responsible for any damage occurring from improper header configurations.

Please call Hillco Technologies if you have any questions regarding the CH9030 or any other header configuration.

# Warranty Policy



## **Statement of Limited Warranty** (North American Harvest Products)

Hillco Technologies, Inc. (Hillco) warrants its new products to be free from defects in material and workmanship for a period of twelve (12) consecutive months following the warranty start date.

The warranty start date for Hillco products invoiced by Hillco from October 1<sup>st</sup> through May 31<sup>st</sup> is the first day of June following the Hillco invoice date, or the first date of use, whichever is earliest. For Hillco products invoiced by Hillco from June 1<sup>st</sup> through September 30<sup>th</sup> the warranty start date is the date of invoice. Once the warranty period has begun, it cannot be stopped or interrupted.

Hillco's obligation under this warranty shall be limited to repairing or replacing, free of charge to the original purchaser, any part that, in Hillco's judgment, shows evidence of such defect. Hillco additionally agrees to repair, at no cost to the original purchaser, any physical damage to the product to which the Hillco product is directly attached provided that the damage is directly attributable to a defect in the design or manufacture of the Hillco product, as determined by Hillco, and that the damage occurs during the effective warranty period of the Hillco product.

Hillco warrants genuine Hillco replacement parts and components to be free from defects in material and workmanship for a period of ninety (90) consecutive days following the Hillco invoice date, or the remainder of the original equipment warranty period, whichever is longer.

### **Limitations to Warranty**

This warranty does not cover:

- 1) Any product damaged by accident, abuse, misuse, negligence, or improper maintenance.
- 2) Any unauthorized product alteration or modification.
- 3) Any unauthorized repairs made with parts other than genuine Hillco parts unless specifically authorized by Hillco.
- 4) Any repairs performed by anyone other than Hillco or an authorized Hillco dealer unless specifically authorized by Hillco.
- 5) Any claims directly resulting from improper installation, except those installations performed by Hillco.

### **Warranty Procedure**

A Hillco Warranty Registration Form must be fully completed and returned to Hillco within 30 days of sale of the product to the retail customer or the first day of use, whichever is earlier.

All warranty claims must be submitted on a fully completed Hillco Warranty Claim Form.

All warranty work must be performed, and claims submitted, within thirty (30) days of the occurrence of the claim and within the warranty period.

All parts removed during warranty repair should be held for a period of sixty (60) days after the warranty claim has been submitted to Hillco.

Hillco reserves the right to either inspect the product at the original retail purchaser's location, or the authorized Hillco dealer's location; or require it to be returned to Hillco, transportation charges prepaid, for inspection.

### **Limitation of Liability**

Hillco makes no express warranties other than those, which are specifically described herein. Any description of the goods sold hereunder, including any reference to buyer's specifications and any descriptions in circulars and other media published by Hillco is for the sole purpose of identifying such goods and shall not create an express warranty that the goods shall conform to such description.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED. There are no implied warranties of merchantability or fitness for a particular purpose. This warranty states Hillco's entire and exclusive liability and buyer's exclusive remedy for any claim for damages in connection with the sale or furnishing of Hillco products, their design, suitability for use, installation, operation, or for any claimed defects herein. HILLCO WILL IN NO EVENT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, NOR FOR ANY SUM IN EXCESS OF THE PRICE RECEIVED FOR THE GOODS FOR WHICH LIABILITY IS CLAIMED.

No representative of Hillco nor any dealer associated with Hillco has the authority to change the items of this warranty in any manner whatsoever, and no assistance to purchaser by Hillco in the repair or operation of any Hillco product shall constitute a waiver of the conditions of this warranty, nor shall such assistance extend or revive it.

Hillco reserves the right to make improvements in design or changes in specifications at any time, without incurring any obligation to owners of units previously sold.

D-041201LJH01

## Introduction

Thank you for choosing the Hillco CH9030 Leveling System to compliment your farming operation. This product has been designed and manufactured to meet the needs of a discriminating buyer for increasing the performance of a combine.

Safe, efficient and trouble free use of your Hillco CS9030 Leveling System requires that you and anyone else who will be operating or maintaining the leveling system, read and understand the safety, operation, and maintenance information contained in the Operator's Manual.

If extra copies of the operator's manual are needed, contact Hillco at (800) 937-2461 and ask for the document number found on the front cover page.



### **Hillco Model CH9030 Hillside Leveling System**

This manual covers the Hillco Model CH9030 (for the Case IH 7250, 8250, or 9250 combines) Leveling System. Use the Table of Contents as a guide when searching for specific information.

Keep this manual handy for frequent reference and to pass on to new operators or owners. Call your Hillco dealer or Hillco if you need assistance or information at (800) 937-2461.

**OPERATOR ORIENTATION** – The directions left, right, front, and rear, as mentioned throughout this manual, are as seen from the combine operator's seat and facing in the direction of forward travel.

## Safety

### SAFETY ALERT SYMBOL



This Safety Alert symbol means  
**ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!**

The Safety Alert symbol identifies important safety messages on the Hillco Leveling System and in the manual. When you see this symbol, be alert to the possibility of personal injury or death. Follow the instructions in the safety message.

### SIGNAL WORDS

Note the use of the signal words DANGER, WARNING, and CAUTION with the safety messages. The appropriate signal word for each message has been selected using the following guidelines:



**DANGER**

**DANGER** - An immediate and specific hazard, which WILL result in severe personal injury or death if the proper precautions are not taken.



**WARNING**

**WARNING** - A specific hazard or unsafe practice, which COULD result in severe personal injury or death if proper precautions are not taken.



**CAUTION**

**CAUTION** - Unsafe practices which COULD result in personal injury if proper practices are not taken, or as a reminder of good safety practices.

**NOTICE**

**NOTICE** - is used to address practices not related to physical injury.

## OPERATION SAFETY

1. Read and understand the Operator's Manual and all safety labels before operating the leveling system.
2. Make sure that all controls are in the manual position before starting the combine.
3. Clear the area of all bystanders, especially children, before starting the leveling system and during operation.
4. Make sure all safety shields are in place before operating the combine. Never operate the machine with the shields removed.
5. Keep hands, feet, hair and clothing away from all moving and/or rotating parts.
6. Stay seated in the cab during operation.
7. Operate controls only when sitting in the seat of the combine.
8. To avoid engine damage, do not run the machine for extended periods of time when it is in the leveled over position.
9. Always travel at a safe speed. Use caution when making turns or traversing ditches.
10. The leveling system is equipped with a maximum level warning lamp. This lamp indicates when the machine has reached its maximum leveling capability. There are restrictions as to tread width and tire selection for combines used in harvesting slopes greater than the maximum leveling capability of the leveling system.
11. The use of after-market grain tank extensions is prohibited from use on combines equipped with the Model CH9030 leveling system.
12. Level Limit Stops should be used on combines that rely on the limit switches to stop the leveling prematurely to prevent sheet metal damage

## HYDRAULIC SAFETY

1. Do not search for high-pressure hydraulic leaks without hand and face protection. A tiny, almost invisible leak can penetrate skin, thereby requiring immediate medical attention.
2. Use cardboard or wood to detect leaks – never your hands!
3. Before inspecting the hydraulic system of the leveling system, install the safety stops.
4. Before operating the leveling system, ensure that there are no obstructions between the chassis and the carriage.
5. Maintain proper hydraulic fluid levels.
6. Ensure all fittings and hoses are in good repair.
7. Do not make any repairs to the leveling system hydraulic system including: valves, hydraulic hoses, adapters, pumps, manifolds, or reservoirs without first contacting your authorized Hillco dealer.




## SERVICING AND MAINTENANCE SAFETY

1. Review the Operator's Manual and all safety items before servicing or maintaining the leveling system.
2. Place the Auto/Off/Manual leveling switch in the "Off" position, stop the combine engine, wait for any moving parts to stop, block the tires, the header, and the cylinder areas before servicing, repairing, adjusting, or maintaining the leveling system.
3. Hydraulic oil is under pressure. Use caution when dealing with the hydraulic system.
4. Keep hands, feet clothing and hair away from all moving and/or rotating parts.
5. Clear the area of bystanders, especially children, when carrying out any maintenance, repairs or making any adjustments.

## HIGHWAY OPERATION AND TRANSPORT SAFETY

1. Check with local authorities regarding combine transport on public roads. Obey all applicable regulations and laws.
2. Check clearance elevations and widths of combine for travel near power lines, bridges, trees, etc.
3. Make sure the Auto/Off/Manual leveling toggle switch is in the "Off" position for all transport and highway travel situations.
4. Always travel at a safe speed. Use caution when making corners or meeting traffic.

## READ OPERATOR'S MANUAL SYMBOL

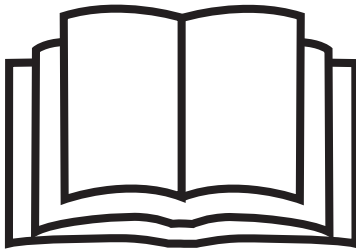

Decals, which display the —Read Operator's Manual symbol, are intended to direct the operator to the Operator's Manual for further information regarding maintenance, adjustments and/or procedures for particular areas of the leveling system. When a decal displays this symbol refer to the Operator's Manual for further instructions.


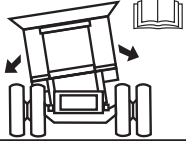


## **Safety Labels**

Familiarize yourself with the location of all safety labels. Read them carefully to understand the safe operation of your machine.

### **TO APPLY NEW OR REPLACEMENT LABELS**

1. Make sure the label area is smooth by removing any debris such as dirt or old labels.
2. Wash the area with soap and water and then dry it thoroughly.
3. After the area has completely dried, peel the backing off the safety label and place it onto the cleaned area.
4. Make sure all areas of the label have adhered to the machine by pressing down on the entire face of the label, including the corners.

 <h1 style="margin: 0;">CAUTION</h1>	
	<ul style="list-style-type: none"> <li>• This machine is equipped with a Leveling System.</li> <li>• Make sure the Auto/Manual leveling control switch is in the manual position before starting machine.</li> <li>• Read operator's manual before operating this machine.</li> </ul> <p style="text-align: right; font-size: small;">LL20-100782</p>



 <h1 style="margin: 0;">DANGER</h1>	
	
<p><b>PINCH POINT HAZARD</b></p> <ul style="list-style-type: none"> <li>• Keep hands, feet and body away from moving parts.</li> <li>• Do not stand or climb on machine when operating.</li> <li>• Hazard occurs during leveling and header trim.</li> </ul> <p style="text-align: right; font-size: small;">LL20-100784</p>	




**! DANGER**



**CRUSHING HAZARD**  
To prevent serious injury or death:

- Keep all persons and objects clear while any part of this machine is in motion.

LL20-100783

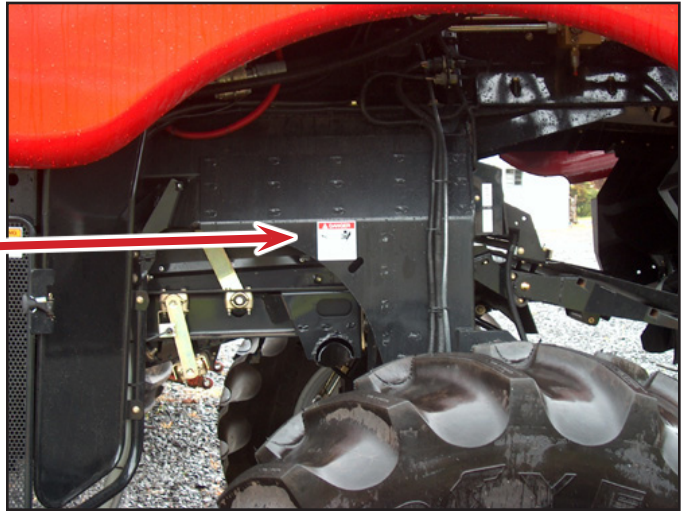


**! CAUTION**




**MOVING STEP HAZARD**  
Bottom step lowers and retracts upward.  
Use caution when using ladder.

LL20-100785

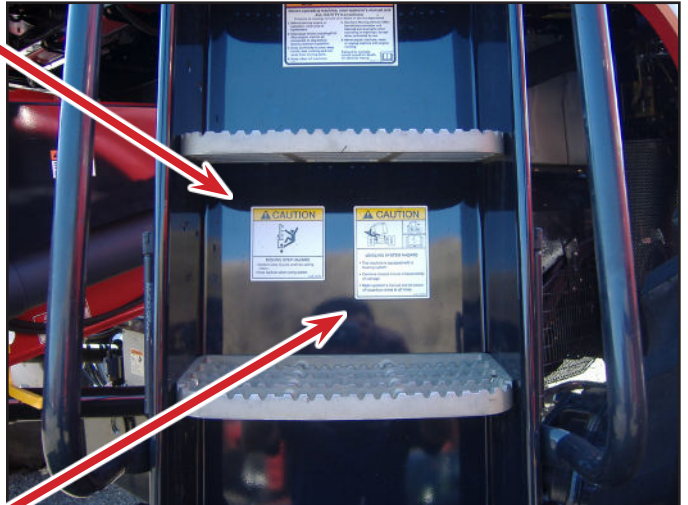

**! CAUTION**

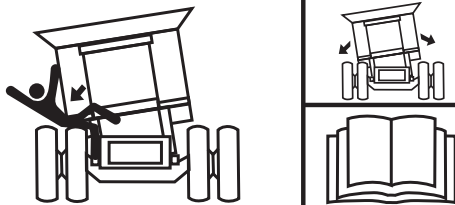

**LEVELING SYSTEM HAZARD**

- This machine is equipped with a leveling system.
- Combine chassis moves independent of carriage.
- Read operator's manual and be aware of hazardous areas at all times.

LL20-100787


**! DANGER**




**HYDRAULIC HAZARD**

- Loss of hydraulic pressure may cause combine to tip.
- Read operator's manual before disconnecting any hydraulic components.

LL20-100788

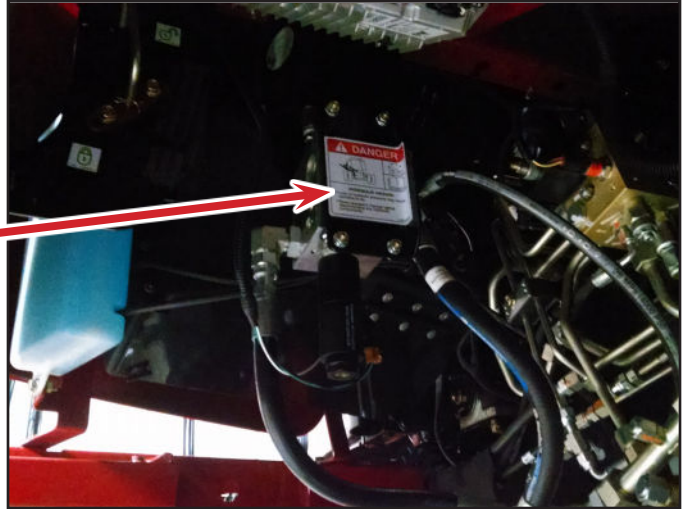

**NOTICE**

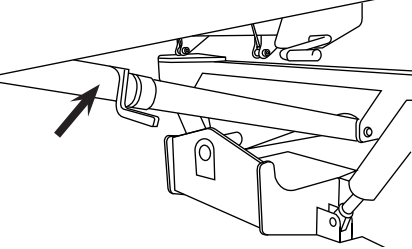

- When opening rock trap, the feeder house must be in up position with header lock engaged.
- Do not leave rock trap open when lowering feeder house or severe damage will occur.

LL-141012



**! DANGER**



**AVOID CRUSHING INJURY**  
Install safety stops on the main leveling cylinders before performing repair or maintenance on the leveling system to prevent accidental tipping of combine chassis.



LL-143621


**! DANGER**



**HYDRAULIC HAZARD**

- Loss of hydraulic pressure may cause combine to tip.
- Read operator's manual before disconnecting any hydraulic components.

LL20-100788

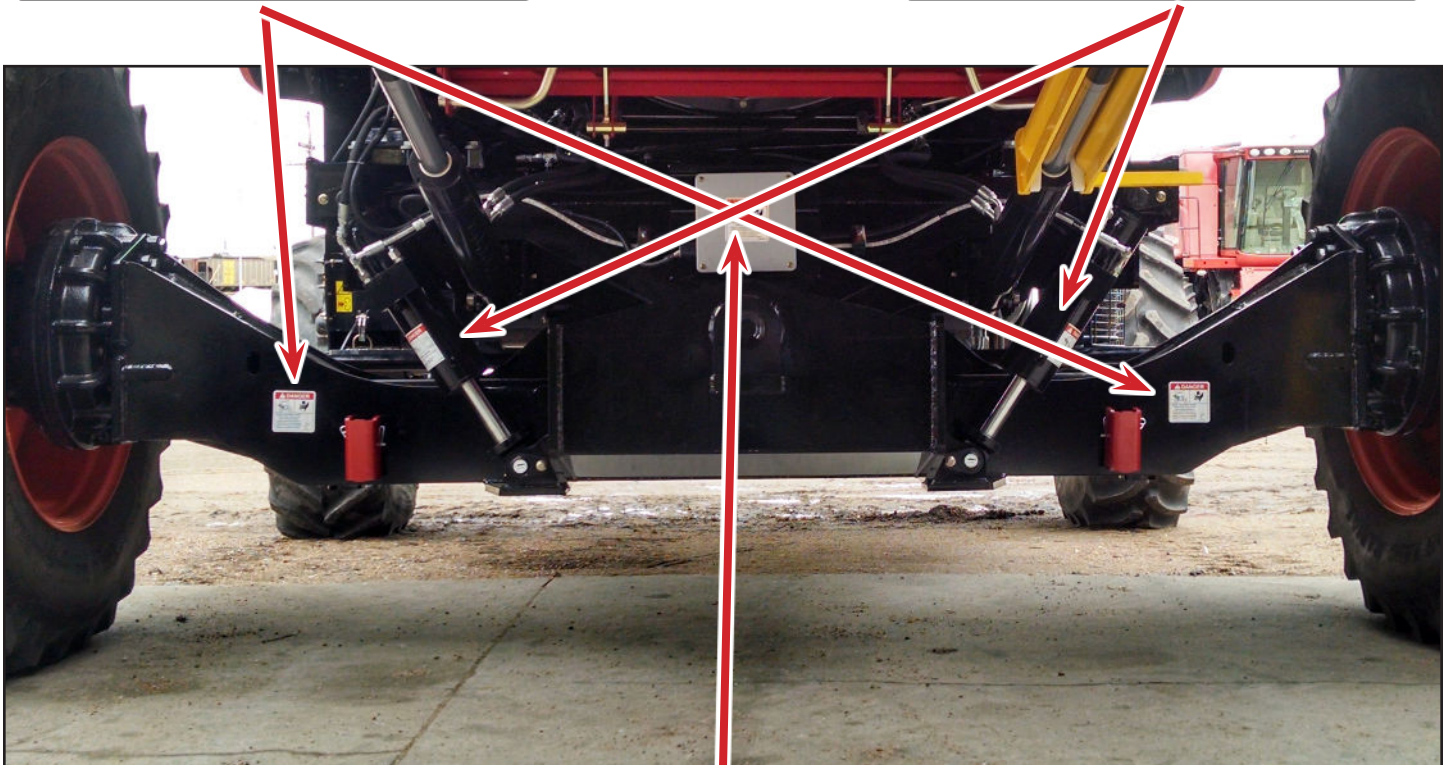

**! WARNING**




**CRUSHING HAZARD**

- Electric components control combine leveling and header trim.
- Make sure machine is off and header lock is down before making any adjustments to the electrical system.

LL20-100786

## Paddle Beater Transition


### Notice

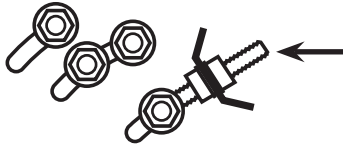

- Do Not use Eyebolt to Adjust Header Angle or Threads will Strip.
- Refer to Combine Operator's Manual for Adjusting Header Angle.


150681

### Notice

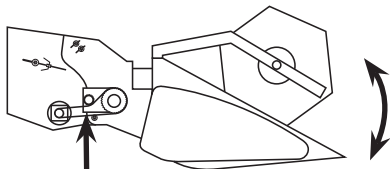


- Loosen Transition Drive Chain and disconnect prior to adjusting header angle.
- Refer to Leveling System Operator's Manual for tensioning Transition Drive Chains.

150691

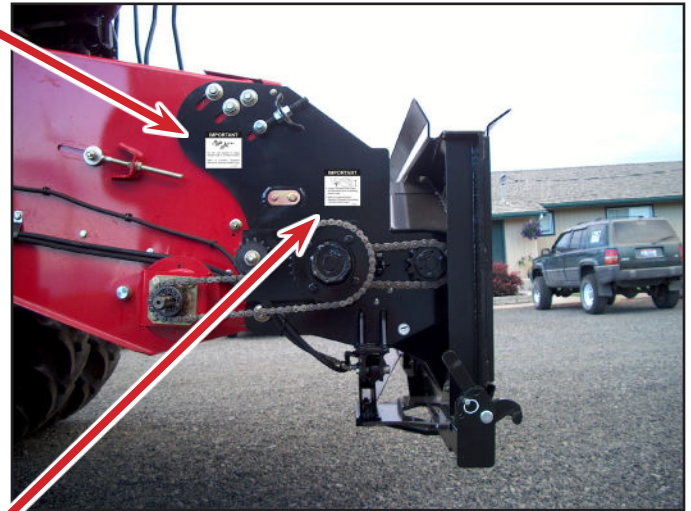


## Beater Less Transition

### Notice

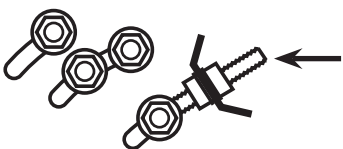

- Do Not use Eyebolt to Adjust Header Angle or Threads will Strip.
- Refer to Combine Operator's Manual for Adjusting Header Angle.

150681

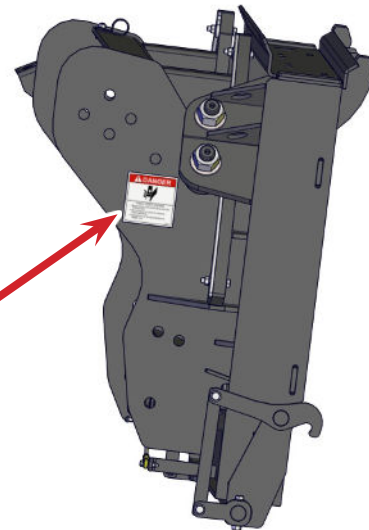

# Operation, Setup, and Maintenance

## Leveling System Controls

The leveling controls on the Home Screen are shown below. The monitor and controls are located to the right side of the Pro 700 monitor.

The Road/Field Mode (A) must be in the Field selection for leveling functions to work. If it is in the Road Mode then the leveling functions are disabled. Pushing combine's Road/Field button toggles the leveling system between Road and Field.

**AUTO:** Pushing the Auto/Manual Leveling Button (B) once will toggle between Auto & Manual. When Auto is showing on the display (C), this means automatic leveling operation is engaged. The automatic leveling controller monitors changes in slope and corrects chassis position to maintain a level chassis position. The Manual Left/Right Leveling Buttons (D, E) will override the automatic leveling controller while the switch is depressed. Upon release of the switch, the leveling system will return to automatic leveling mode.

**MANUAL:** Push the Auto/Manual Leveling Button (B) once to enter the Manual Leveling mode (Manual will be displayed). In Manual mode the Manual Left/Right leveling switches will level the combine left and right. When the switch is released the combine chassis will maintain its current position.



- A - Road/Field
- B - Auto/Manual Switch
- C - Auto/Manual Indicator
- D - Manual Left
- E - Manual Right

**Notice**  
Monitor defaults to Road Mode each time system is powered up. This is done to prevent any accidental leveling. The Road/Field mode is controlled by the combine's Road/Field switch.

**Leveling Controls:** Located on the right side of the Pro 700 monitor. These switches allow for Auto/Manual control (B) and Left/Right leveling (C, D).



## Maximum Level

The leveling system is equipped with a maximum level warning indicator on the monitor. On the Main Control Screen Max Level will be displayed. This indicates when the machine has reached its maximum leveling capability. Hillside Leveling Systems reach maximum level at 27%. Sidehills reach maximum level at 18%.



## Header Trim Controls

The header trim switch is the four-position header control switch mounted in the combine's SR control lever. It is used to raise and lower the header as well as trim the header left and right.

**TILT LEFT:** Push the switch to the left to tilt the header counterclockwise.

**TILT RIGHT:** Push the switch to the right to tilt the header clockwise



Header Trim Switch



## 4WD Alarm

The 4WD Warning Alarm is located in the Leveling System Control Monitor. It will sound an alarm, a warning light will flash and 4WD Alarm will be displayed on the monitor if the combine is traversing down a slope that is greater than 20% and the 4WD is engaged. Disengage the 4WD and the warning will be cleared. On downhill slopes less than 20%, level ground or uphill slopes the warning will not come up if 4WD is engaged.

See your combine's Operator's Manual to understand how to operate the Rear Wheel Assist (RWA).



4WD Engage/Disengage

4WD Alarm will be displayed.




### **WARNING**

When the 4WD Alarm Sounds and Warning is displayed **IMMEDIATELY DISENGAGE** the Rear Wheel Assist or Control of the Combine **COULD** be lost.

## Operator Adjustments

From the Home Screen, push the button (A) below Menu to enter the Main Menu.

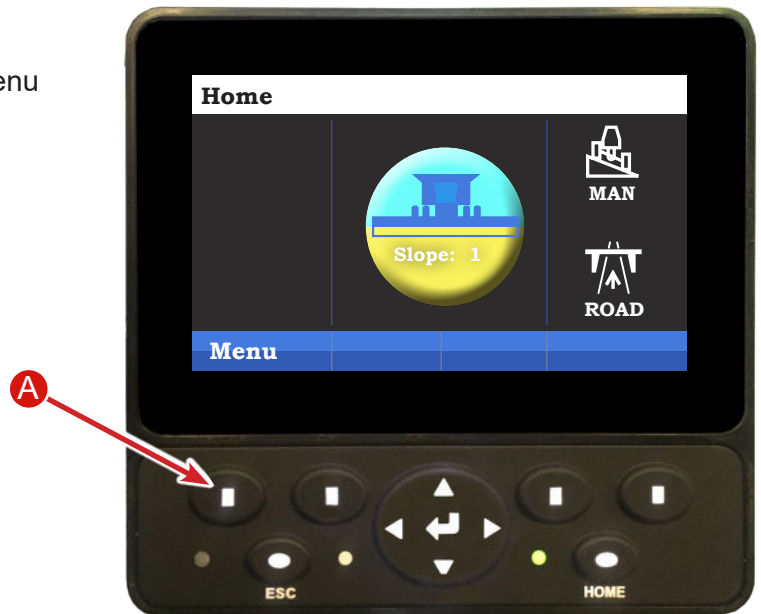

Push the up or down arrows (B) to move to the desired function. Once the desired function is highlighted press the Enter button (↵) (C) to go into that page. Press the Home button to go to the Home screen.



## Operator Settings Menu


Select the desired Function in the Operator Settings Menu. Scroll up and down using the up and down arrows. When the desired function is highlighted select the enter button. To go back to the main menu select the Back button.



## Manual Speed


The manual leveling speed can be sped up or slowed down (A). This setting only affects manual leveling and not auto leveling speed.

Adjust the green bar left and right using the left and right arrow buttons. To save your settings and return to the Operator Settings Page press the ESC button.

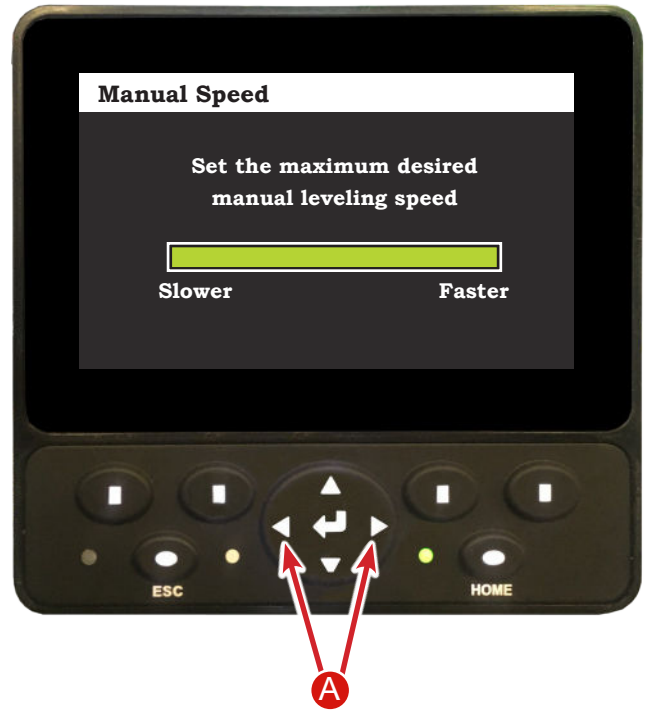

## Display Backlight

The brightness can be adjusted up and down. Use the up and down arrows (B) to adjust the brightness and then hit Enter to save the setting.

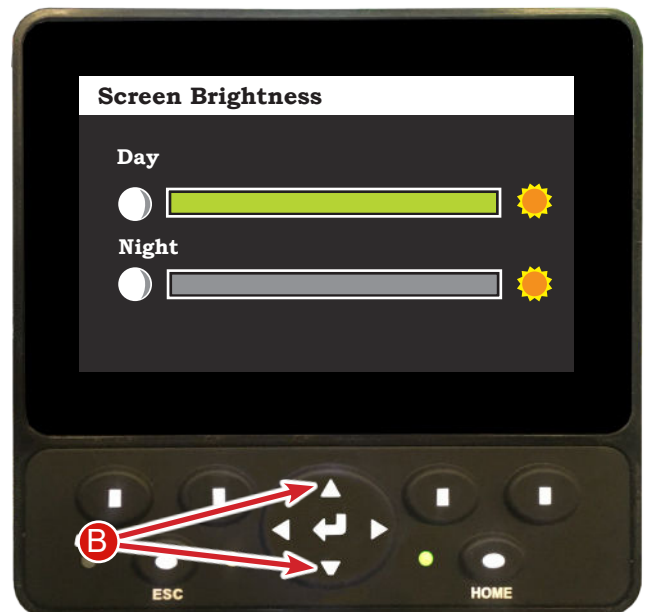

## Smart Unload


Smart Unload is an optional safety feature that puts the leveling system from auto leveling to manual leveling when unloading. This prevents the unloading auger from coming in contact with the grain cart while unloading on the go on changing terrain.

As soon as the unloading auger starts to swing out the system changes from Auto Leveling to Manual Leveling.

When the auger is in all the way the operator must cycle the auto manual switch to go back to auto leveling.

The setting is defaulted to OFF. If you wish to turn it on push the right arrow (A). The red OFF will turn white and the "On" will turn from white to green. To turn off, puch the left arrow. (B)

Press the ESC button to return to the previous screen.

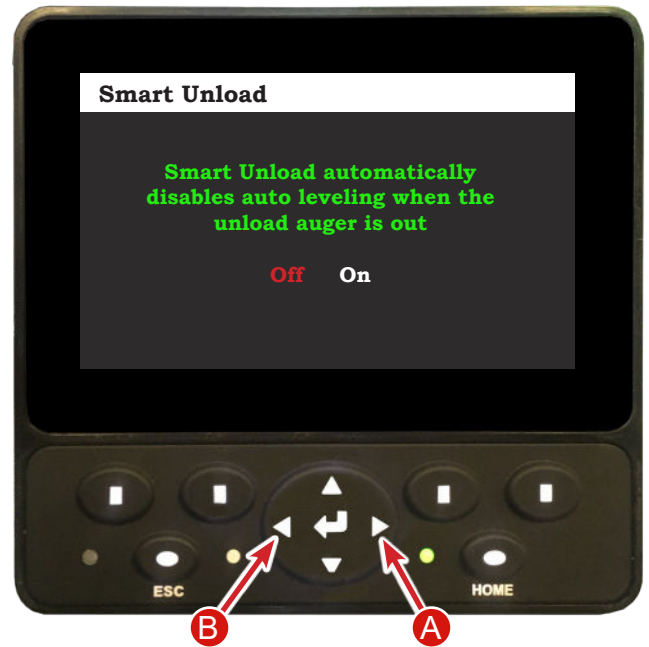

## Calibration


From the main menu, using the up/down arrows (C), highlight calibration. Press enter (D).

*Continued on next page.*



After you select Calibration the message to the right appears.

Press Enter (A)

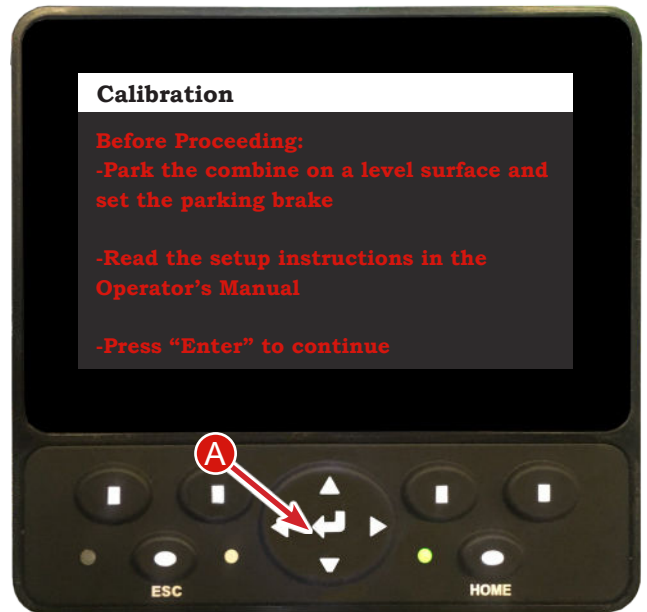


### Joystick Calibration


Highlight Joystick and press Enter (B).

#### Notice


When in the Calibration Menu screen all limits have been deactivated. The carriage can rotate until the cylinders bottom out.

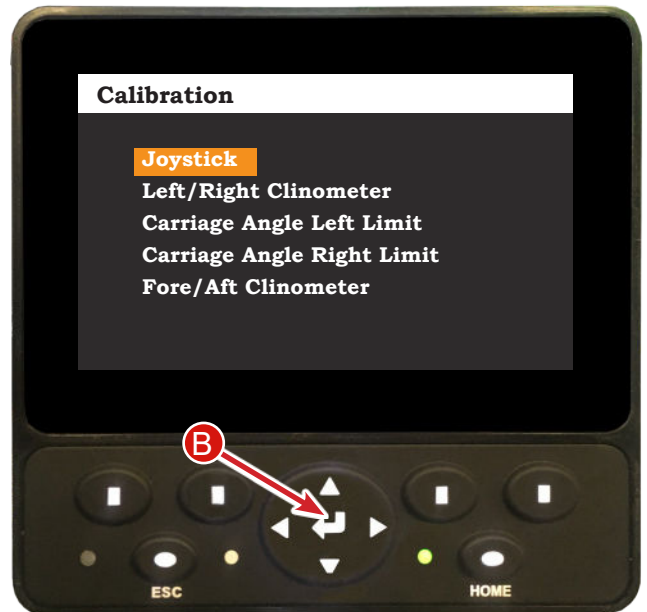

With the Joystick in the center position press the Enter button (C).

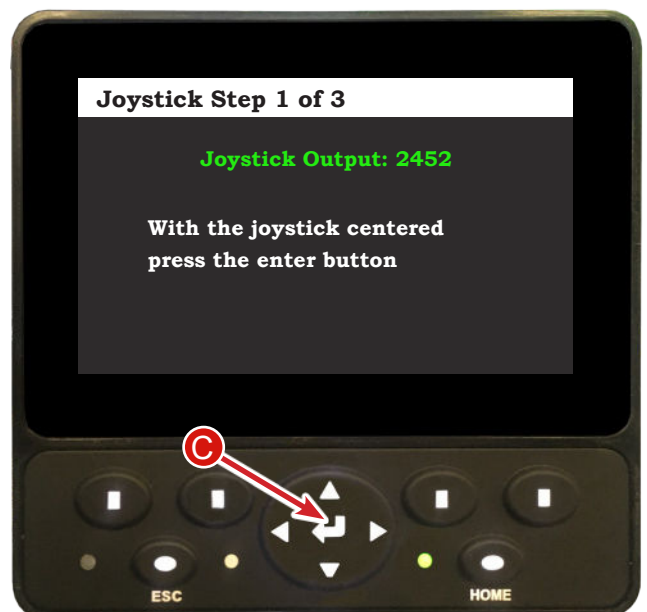

Push the Joystick lever all the way to the right and then press the Enter button (A).

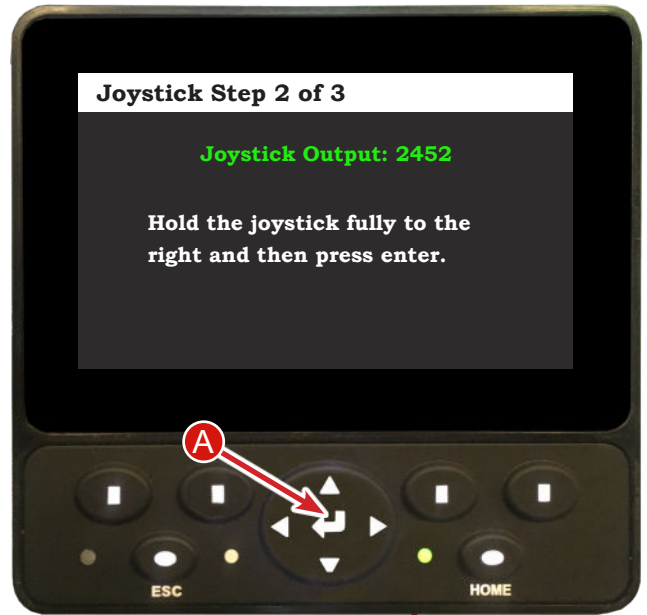

Push the Joystick lever all the way to the left and then press the Enter button (B).




The screen will show the calibration is saved. Joystick Calibration is now complete. Press the ESC button (C) to return to the calibration menu.




## Left/Right Clinometer Calibration (Level Zero Point)


Using the up/down arrows, highlight Left/Right Clinometer and press Enter (A).

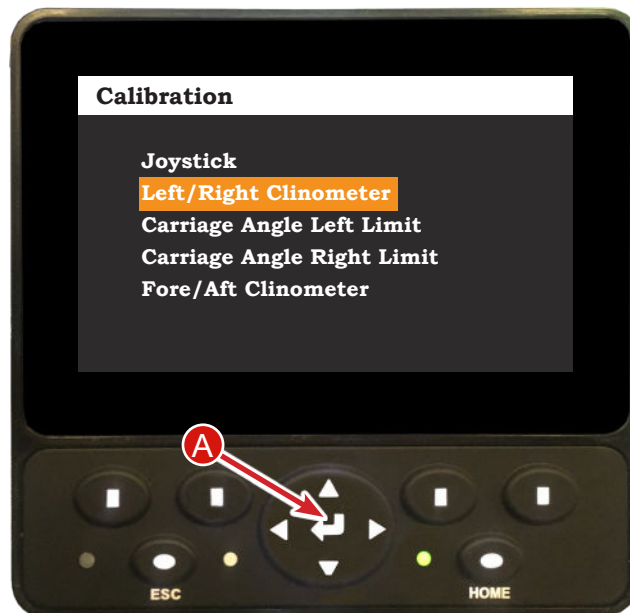

Follow the directions on the screen. When the combine is level side to side press Enter (B).

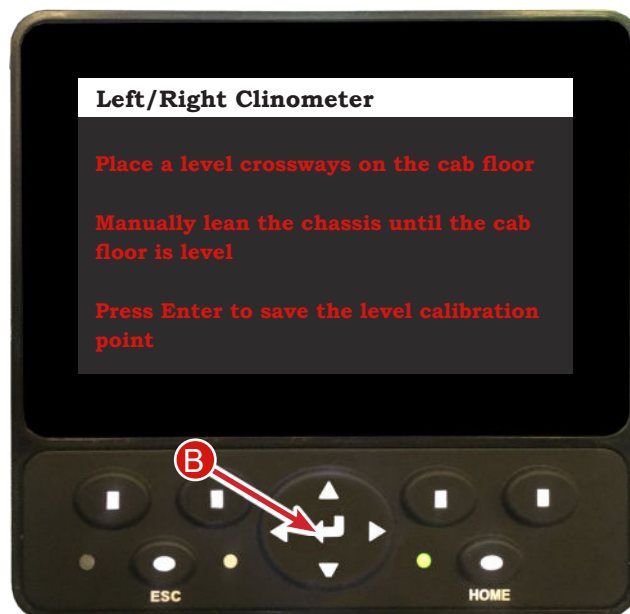

The screen will show the limit has saved. Press ESC (C) to return to the calibration menu.

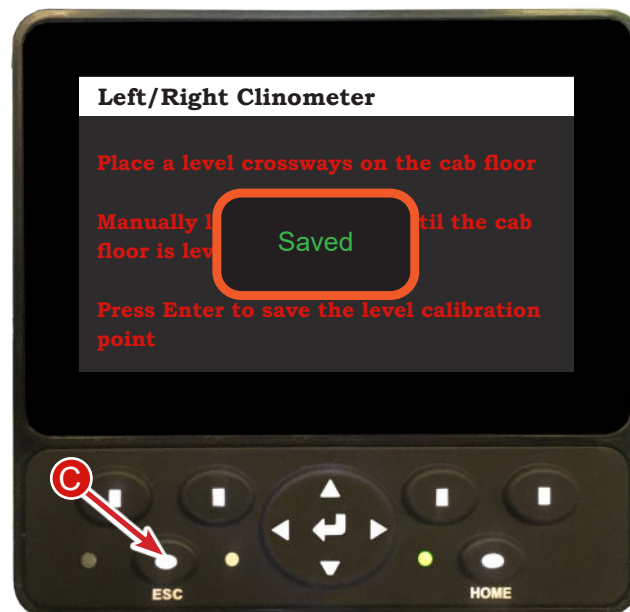

## Carriage Angle Left Limit


This setting sets the maximum tilt to the left.

To set the carriage angle left limit, park the combine on level ground and set the parking brake. Then raise the feeder spout and drop the header lift cylinder safety stop.

Select the Carriage Angle Left Limit and press Enter (A) from the Calibration Menu.

Lean the combine to the left until either the maximum leveling capabilities of the leveling system are reached or contact is made between two points. The software will automatically set back approximately one inch.

When maximum level has been achieved press the Enter button (B). When saved is displayed, hit ESC (C) to return to calibration menu.

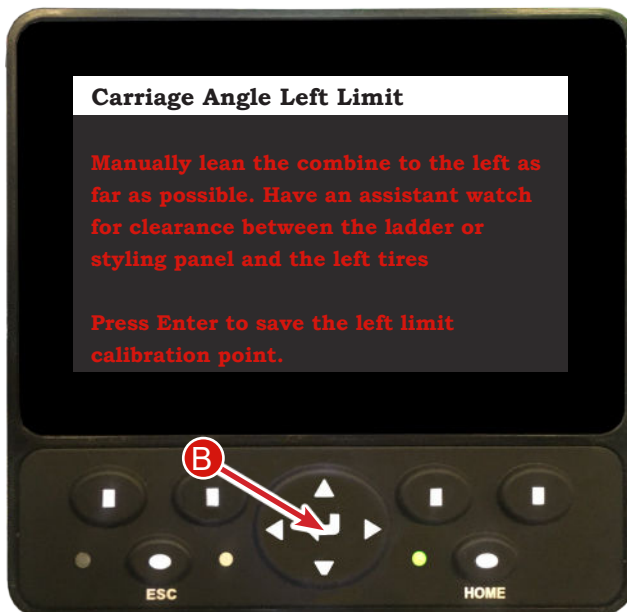

### Notice

With certain tire selections the limit sensors can be used to prevent the need to modify the sheet metal on the left and right side panels of the combine. Installation of level limit stops is recommended to prevent sheet metal damage in the event of a limit switch failure. (See LEVEL LIMIT STOPS section)

### Notice

If Level Limit Stops are used be sure that the left limit sensor has been calibrated with that stop in place. Damage to the cylinderts or other leveling system components may occur if sensors aren't set properly.



## Carriage Angle Right Limit


This setting sets the maximum tilt to the right.

To set the carriage angle left limit, park the combine on level ground and set the parking brake. Then raise the feeder spout and drop the header lift cylinder safety stop.

Select the Carriage Angle Right Limit and press Enter (A) from the Calibration Menu.

Lean the combine to the right until either the maximum leveling capabilities of the leveling system are reached or contact is made between two points. The software will automatically set back approximately one inch.

When maximum level has been achieved press the Enter button (B). When saved is displayed, hit ESC (C) to return to calibration menu.

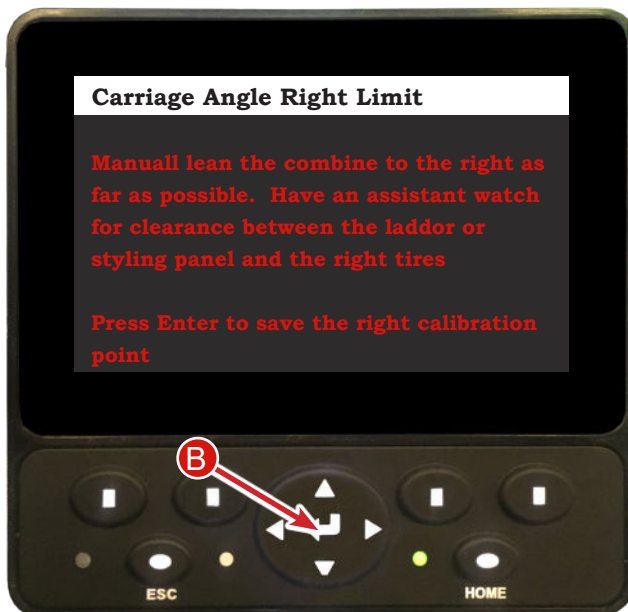

### Notice


With certain tire selections the limit sensors can be used to prevent the need to modify the sheet metal on the left and right side panels of the combine. Installation of level limit stops is recommended to prevent sheet metal damage in the event of a limit switch failure. (See LEVEL LIMIT STOPS section)

### Notice


If Level Limit Stops are used be sure that the left limit sensor has been calibrated with that stop in place. Damage to the cylinders or other leveling system components may occur if sensors aren't set properly.

## Fore/Aft Clinometer


Using the up/down arrows highlight Fore/Aft Clinometer and press Enter (A).

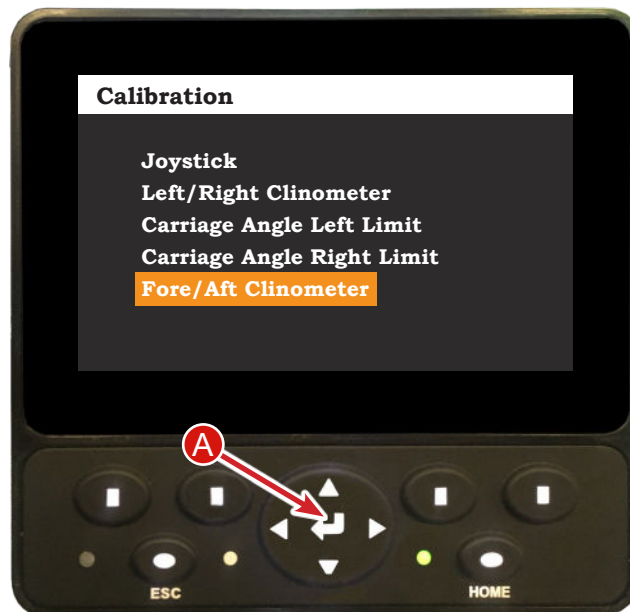

When the combine is level front to back press Enter (B).

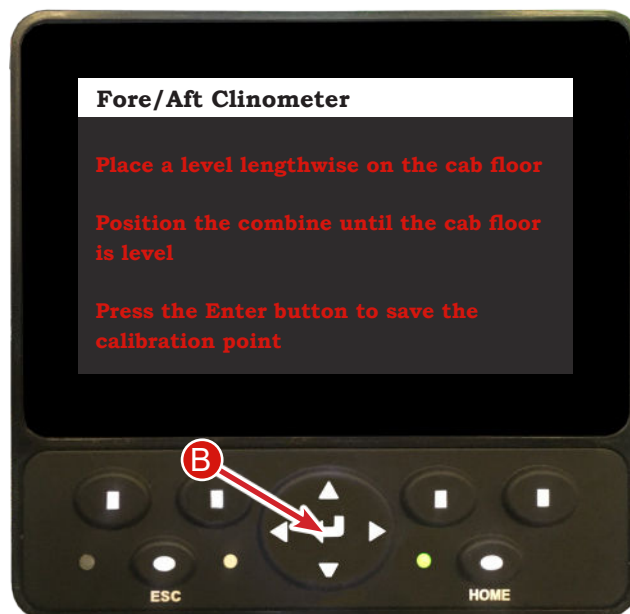

The screen will show saved. Press ESC (C) twice to return to the Main Menu.

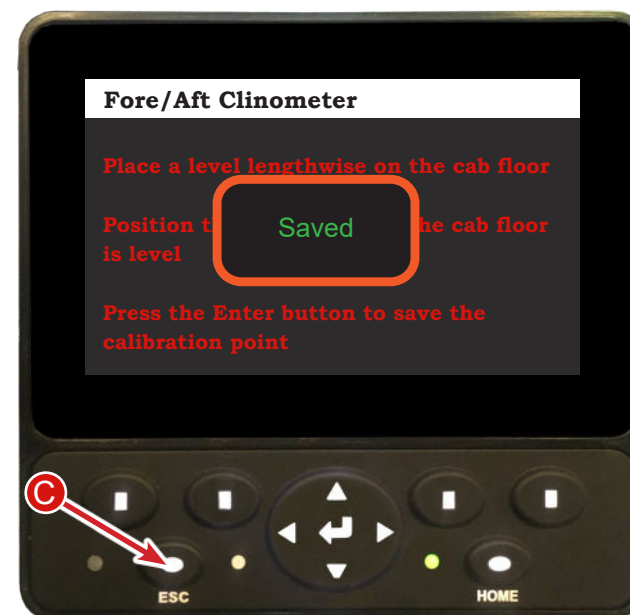

## Diagnostics

From the Main Menu highlight Diagnostics using the up/down arrows. Press Enter (A) to enter the diagnostics menu.



The Diagnostics menu allows the operator to view output information from the electrical system on the leveling system.

Using the up/down arrows, highlight Clinometers and press Enter (A) to view the output of the clinometers.



## Clinometers

Fore/Aft (B) shows the current clinometer output. By driving up or down a hill this value will change.

Left/Right (C) shows the current clinometer output. By leveling the combine back and forth the values will change.

The value for Level Zero Setpoint and 4WD Zero Setpoint (D) are the current calibration values. These values are set in the Calibration screen under Left/Right Clinometer and Fore/Aft Clinometer.



## Carriage Sensor

The Carriage Sensor Output is the current voltage output at a given carriage position.

Leveling the combine back and forth will change this value. Leveling to the right will increase the value.


The value for Left and Right Limit Setpoint (A) are the current calibration values for maximum level to both sides.



## Valve Coils

Range is from 0-18000.

Only one coil will be activated at a time.

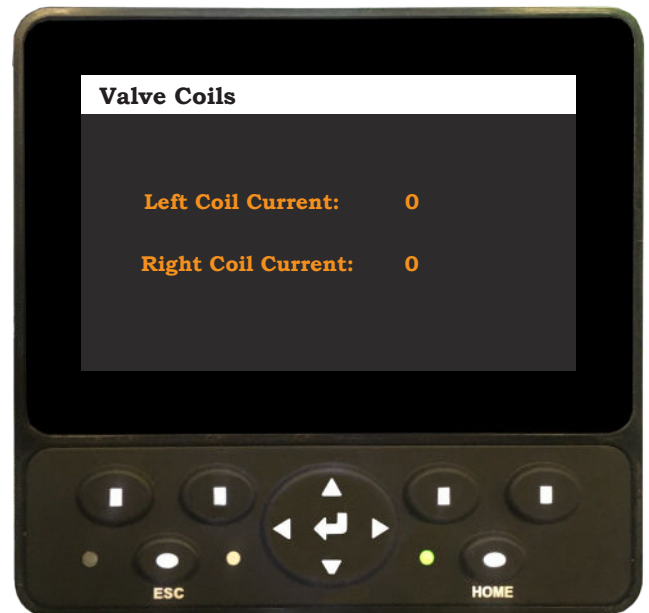

## Joystick

Range is from 500-4500.



## Combine CAN

The Signal can be OFF, ON, or " - - - ".

" - - - " means the display is not receiving the CAN message. Off will be red and On will be green.



## Active Alarms

From the Main Menu highlight Active Alarms using the up/down arrows and press ENTER (A).



If you have an Active Alarm the warning icon will appear on the home screen in the upper left corner.



The Active Alarms that will appear are:

- Clinometer Fault
- Carriage Sensor Fault
- Joystick Fault

If any of the sensors output fall outside of the expected range an alarm will trigger on the screen listing the fault and the current output of the sensor in question. While the alarm screen can be cleared the automatic function of the leveling system may be disabled until the fault is corrected. Once an alarm screen has been cleared the fault condition is denoted by an alert icon in the top left of the screen. If the icon is displayed then the active alarms screen in the system menu will show which sensors are in a fault condition.



Carriage sensor Fault



Clinometer Fault



## Joystick Fault



## Dealer Settings

Dealer Settings is a password protected screen that is for dealers to make adjustments to the leveling system.



Password protected page:



## Level Limit Stops

On the Model CH9030 Leveling System a Level Limiting Spacer Kit can be clamped on the main leveling cylinders to mechanically stop leveling if the carriage position sensor were to fail. To determine how many spacers are needed to create a mechanical stop follow these steps:

1. Park the combine on level ground and apply the parking brake.
2. Raise the feeder spout and drop the header lift cylinder safety stop.
3. Lean the combine to the left until either the maximum leveling capabilities of the leveling system are reached or there is approximately one inch of clearance between the tires and any metal that may interfere with them.
4. Shut off the machine and measure the distance between the packing gland on the rod end of the cylinder and the ring that is welded to the rod end.
5. Write down this dimension and repeat the process for the right side. (Both sides must be measured due to the fact that the combine may level further one direction than the other.)
6. The dimensions obtained will determine how many spacers are needed. There is no additional charge for the level limit stops (Call Hillco with dimensions to order).



Cylinder Stops

### Notice

If Level Limit Stops are used be sure that the max level position sensor is calibrated to stop leveling before the level limit stops make contact. Damage to the cylinders or other leveling system components may occur if the position sensor is not calibrated correctly.

## Leveling Controller Function

The Hillco Model CH9030 Leveling System is equipped with a proportional leveling system with manual control and automatic with manual override control. The clinometer, located in the control box, monitors changes in slope and corrects the position of the combine's chassis using proportional leveling. The clinometer maintains leveling accuracy to +/- 1/10th degrees by sending the leveling signal to the proportional leveling control valve on the manifold. As the combine reaches higher degrees of being out of level, the clinometer sends more voltage to the directional control valve's coil and pulls the spool open further to allow oil to flow faster and speed up leveling. As the combine gets closer to +/- 1/10th degrees out of level, less voltage is sent to the coil to slow leveling.

## Mechanical Adjustments

### Tread Width

The CH9030 Leveling System is designed around a main undercarriage length of 3120mm (122-13/16"), which is identical to the combine's original axle tube length with 265mm (10-7/16") axle extensions. The final drives are mounted directly to the undercarriage and axle extensions are not required.



### WARNING

Dual tires are required on all combines equipped with the CH9030 Leveling System. The dual tire and wheel package sold from Hillco creates a 120"-180" tread spacing.



## Tire Selection

### Notice

Model CH9030 Dual Tires - Combines equipped with the Model CH9030 Leveling System must be equipped with 650/75R32 175A8 (24.5-32 6-star) or 650/65R38 Alliance 550 dual tire and wheel package supplied by Hillco to safely support the weight of the combine.

### Notice

Model CH9030 Steering Tires – Combines equipped with the Model CH9030 Leveling System must be equipped with rear tires no larger than 28L-26 (710/70R26) for proper rear side panel clearance.

## Feeder Adjustment for Tire Size

Adjust the feeder adapter to obtain the proper header angle and cutter bar height as shown in the 7250, 8250, and 9250 Operator's Manual. The chart shown in those manuals will no longer be a correct guide to adjust the feeder adapter due to the height increase created by the leveling system.

### Notice

When rotating the transition throat to obtain proper header angle, pay special attention to the 60P chain tension. The 60P chain will have to be lengthened when rotating rearward.


### Notice



- Do Not use Eyebolt to Adjust Header Angle or Threads will Strip.
- Refer to Combine Operator's Manual for Adjusting Header Angle.


150681

### Notice

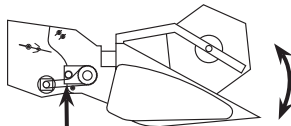

- Loosen Transition Drive Chain and disconnect prior to adjusting header angle.
- Refer to Leveling System Operator's Manual for tensioning Transition Drive Chains.

150691

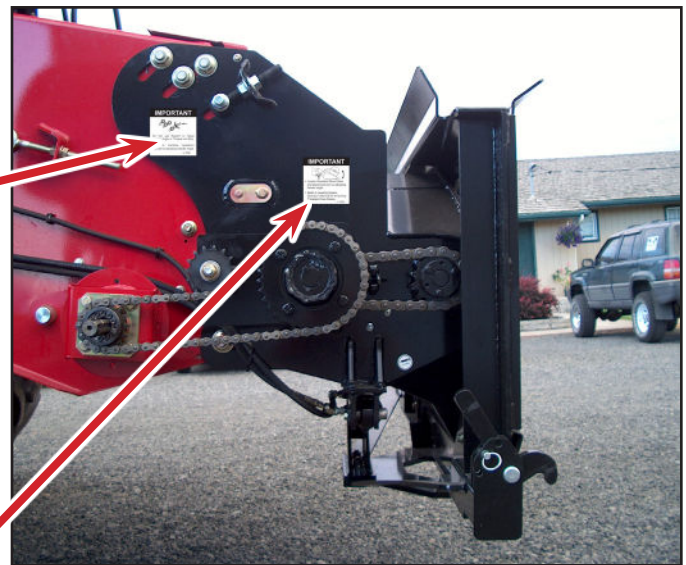

## Conveyor Drum Fore/Aft Position (Paddle Beater Transition)

The conveyor drum may need to be repositioned. The position of the conveyor drum should be set fore or aft so that there is approximately a 1-inch distance between feeder chain slat tip and the paddle beater.

## Header and Combine Connection

Refer to the 7250, 8250, and 9250 Operators Manual for instructions on connecting the header to the combine. All headers require header kits to function properly on the Model CH9030 Leveling System. Contact your dealer for additional information on these kits.


## Rear Axle Weighting

Proper rear axle weighting of a combine equipped with a CH9030 leveling system is critical to the performance and safety of operation. Rear axle weighting increases the tip angle of the combine to improve down hill maneuvers. The appropriate weighting is dependent on such items as feeder house length, header selection, and tire selection. Consult your authorized Hillco Leveling System dealer for weighting information.

Weight can be added to the rear axle through:

- 1) Calcium Chloride in rear tires
- 2) Hillco Rear Axle Weight Package (Up to 10 weights at 150 lbs per weight)

150 lbs weights can be added to the bottom of the Hillco drop axle. Maximum of 10 weights.

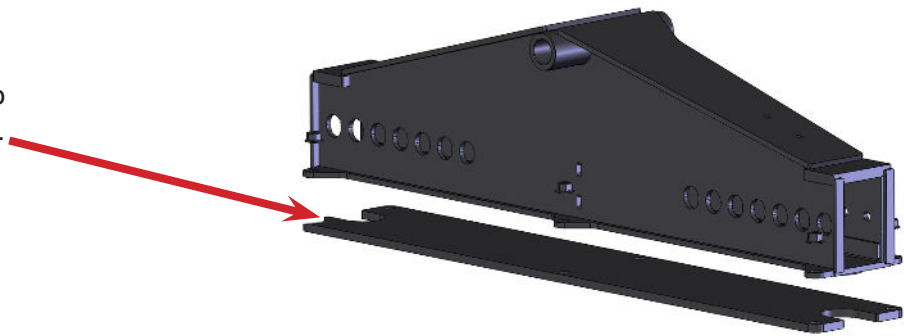

Use caution when using individual turning brakes. Installation of a Hillco Leveling System transmits additional weight to the rear axle of the combine. Excessive braking to turn can damage your combine chassis.



### **WARNING**

The responsibility for making the final determination of appropriate rear axle weighting lies with the operator.

When first operating the CH9030 leveling system in hillside conditions, begin operation on gradual slopes and work up to more severe slopes only after you have determined that rear axle weighting is appropriate for downhill maneuvers. The first indication of insufficient rear axle weighting is sluggish or unresponsive steering while traveling down hill. This effect will worsen if the operator decelerates. Make sure rear axle weighting is sufficient for safe down hill maneuvers, under normal deceleration, in your most severe down hill conditions.

### **Notice**

Use of grain tank extensions other than those provided by the Combine manufacturer is strictly forbidden. Use of such extensions voids both the Hillco and Case IH NEW Equipment Warranties.

## Rear Axle Toe In

If the rear tire and wheel size changed after the proper sized rear tires were installed the toe in should be checked. Consult your combine's operator's manual on the correct toe in for your tire and wheel size.

## Feeder Conveyor Slip Clutch

The feeder conveyor slip clutch should be adjusted yearly to make sure it will protect all of the feeder drive components. Consult your combine's operator's manual on the correct procedure for adjusting the slip clutch.

## Transition Drive Chain (Paddle Beater Transition)

Check to see that the transition drive chain is in proper alignment and has proper tension. Misalignment of these sprockets will cause premature wear of the sprockets and chain. Chain tension is maintained on the 60-pitch chain with an idler sprocket and on the 80-pitch chain by moving the jackshaft assembly. Both are located on the right side of the transition.


80-Pitch is adjusted by moving jackshaft assembly

60-Pitch chain tightener

Make sure sprockets are in alignment

60-Pitch chain will have to be lengthened when rotating rearward

Do not over tension chain or premature chain and sprocket wear will occur.

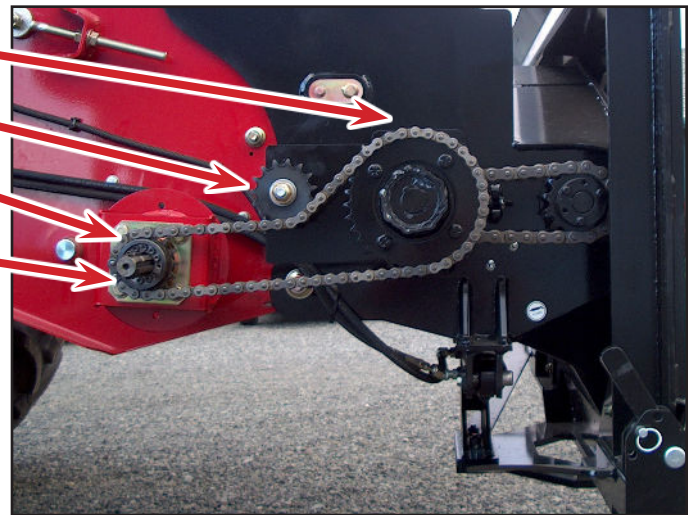

## Transition Slip Clutch

The transition slip clutch is preset at the factory so that damage will not occur to any of the transition drive components. It is not adjustable. To prevent premature wear it is imperative that it is greased according to the lubrication schedule in the maintenance section.

## Operator's Platform

There are two operator's platform configurations that can be used with the CH9030 leveling system and still maintain full leveling to the left.

### Configuration 1

No Platform Extensions.



### Configuration 2

One 6 Inch Platform Extension (A) Provided By Hillco - Refer to the combine Operator's Manual for information on adjusting the platform.


A



### Configuration 3

If the Operator's platform is set up with Case IH P/N 84591089 (Platform Extension) (B), which is approximately 24 inches, left leveling will be reduced from 27% to approximately 15% to prevent the tires from contacting the ladder structure.

B

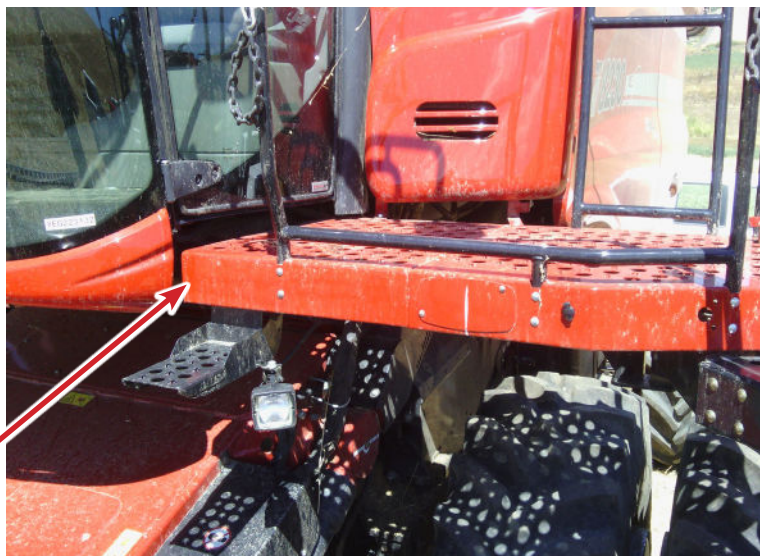

## Ladder

If the ladder doesn't extend and retract properly check the fasteners in all of the pivot locations and make sure they aren't over tightened. Over tightening of these fasteners will cause the ladder to bind.


Make sure that the gas-charged struts keep the ladder fully retracted. Replace the struts if they appear to be weak. If the ladder doesn't fully retract permanent damage may occur during field operation.



## Leveling Cylinder Safety Stops

When the leveling cylinder safety stops are installed on the leveling cylinders, the carriage cannot rotate. The stops must be installed before working on or around the leveling system and also when hauling the combine. It is recommended that the stops be used during long term storage. When the stops are not being used, they should be stored on the mount next to the leveling cylinder.

Leveling Cylinder Stop

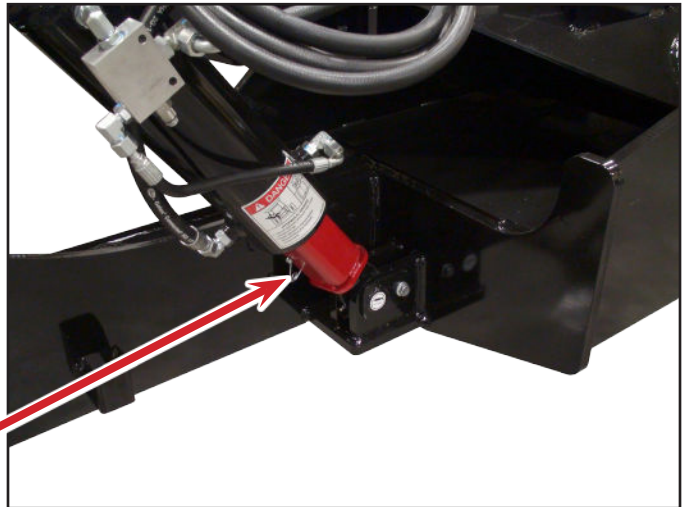

Cylinder Stop Holder



## General Shielding

Before operating the combine all shields must be in place and in working condition. Shield to tire clearance needs to be checked once the correct tires are installed on the combine. Check to see if the clearance is correct by having someone watch the tire and shields as the operator leans the combine to the far right and far left. Some tire selections require limit switches to be set slightly early to allow enough tire clearance between the left and right front side panels.

## Hydraulic Settings

Refer to the Hydraulic Safety section located on page 6 for precautions regarding the hydraulic system.

The Model CH9030 Leveling System utilizes the existing auxiliary combine hydraulic system for their hydraulic requirements with the exception of the addition of a stand-alone leveling manifold located behind the left shield to the rear of the operator's platform. The hydraulic schematic located in the rear of this manual covers the leveling system circuitry. Consult your combine's operator's manual or contact your Case-IH dealer for diagnostics and maintenance regarding the remainder of the hydraulic system.

### Notice

All adjustments on the hydraulic system are preset at the factory for optimal leveling and header trim performance. **DO NOT MAKE ANY ADJUSTMENTS TO THESE SETTINGS WITHOUT FIRST CONTACTING YOUR AUTHORIZED HILLCO DEALER.**

## Hydraulic Hoses

Inspect hydraulic system for leaks, damaged hoses, improper routing, and loose fittings. Hydraulic hoses that are not routed correctly could become worn from working against abrasive edges or moving parts. If abrasions or holes do occur, the hydraulic hoses can only be repaired by replacement. Do not attempt repairs with tape or cements. High pressure will burst such repairs and cause system failure and possible injury. Hydraulic Hose Connections – When tightening loose hoses on the cylinders, pump, etc., always use one wrench to keep the hose from twisting and another wrench to tighten the union. Excessive twisting will shorten hose life and allow the fitting to loosen during operation. Do not over-tighten fittings or adapters. Refer to the 7250/40, 8250/40 and 9250/40 Operator's Manual for information regarding hydraulic oil check intervals, and reservoir fluid levels. Leveling and header trim speeds are preset at the factory. If different speeds are desired please contact your Hillco dealer.

## Hydraulic Cylinder



### WARNING

Each leveling cylinder is equipped with a safety valve (counterbalance valve) that is in place to prevent unintentional leak down of the cylinder. These safety valves are preset at the factory, and should not be adjusted.



### WARNING


Do not make any repairs to the cylinders, disconnect valves, or disconnect any hoses connected to the cylinders, counterbalance valves, bulkhead mount or manifold without first contacting your authorized Hillco dealer. These hydraulic components stabilize the chassis of the combine. Improper repair or replacement of these components could lead to uncontrolled leveling of the combine's chassis. The leveling cylinder safety stops can be used to prevent accidental tipping of the combine during repair.

## Grease Locations

### Paddle Beater Transition


Use Case-IH 251H EP or equivalent NLGI #2 Multi-Purpose Lithium Grease.

Slave Cylinder  
(base and rod ends)  
50 hrs.  
2 Zerks

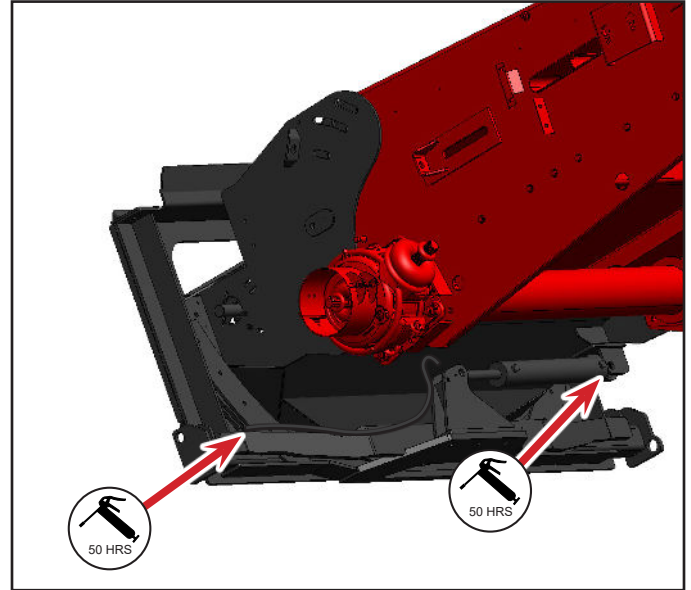


Main Pivot Pin  
50 hrs.  
1 Zerk

Left Leveling Cylinder Base  
50 hrs.  
1 Zerk

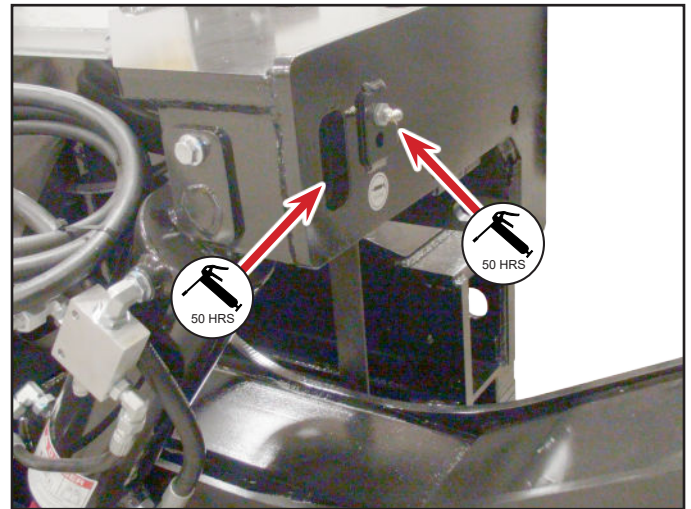


Master Cylinder  
(Base and Rod)  
50 hrs.  
2 Zerks


Right Leveling Cylinder Base  
50 hrs.  
1 Zerk

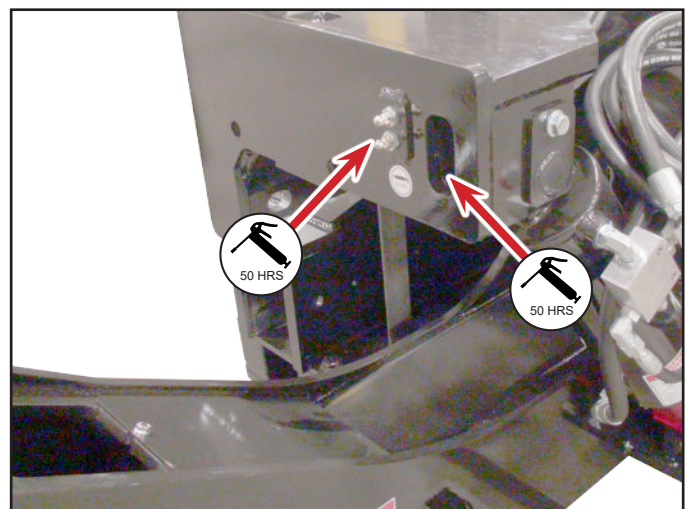


Leveling Cylinders Rod End  
50 hrs.  
2 Zerks

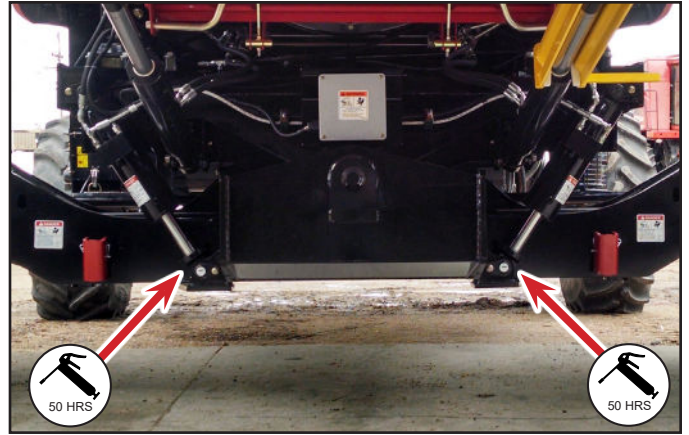

Transition Slip Clutch  
Grease on 50 hour interval with little to no slippage. Grease daily in adverse feeding conditions where slippage may occur more often. Pump until grease comes out.

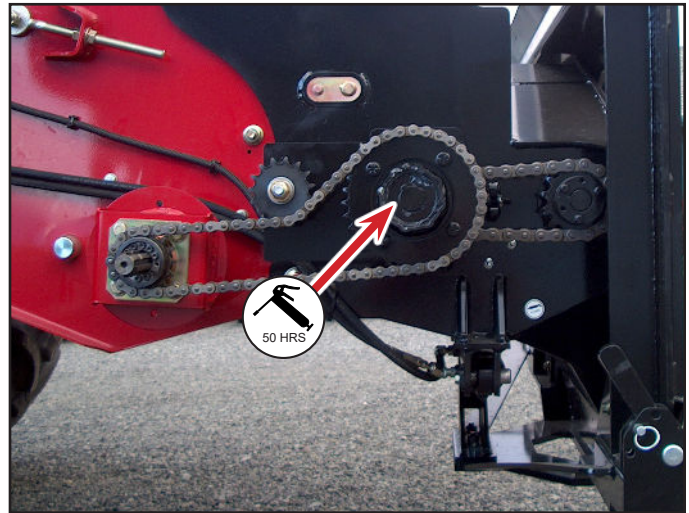


Steering Axle Pivot  
10 hrs.  
1 zerk

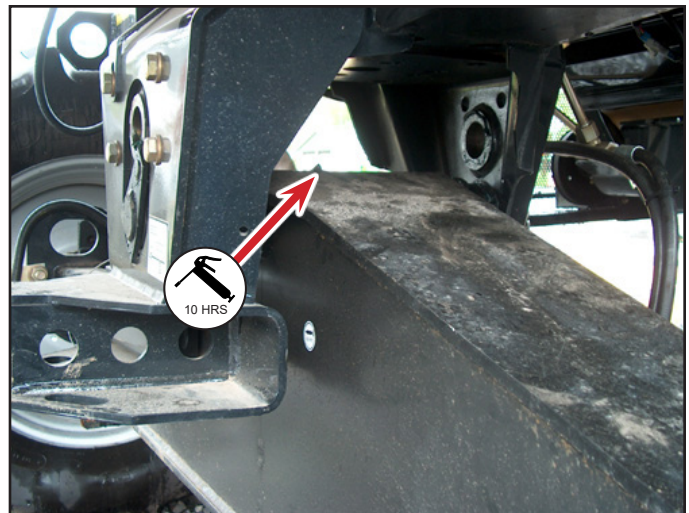




Paddle Beater Jackshaft


50 hrs.  
2 Zerks

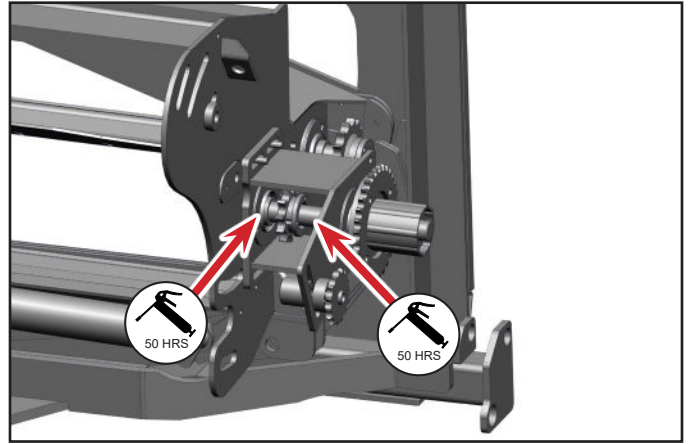


Bearing on Right Side  
Paddle Beater  
50 hrs.  
1 Zerk

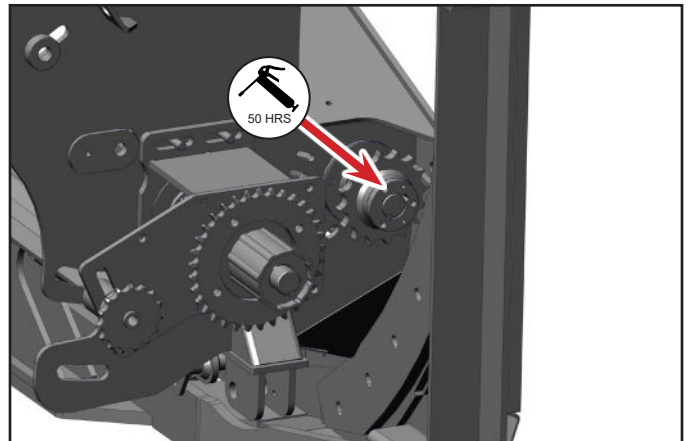

Bearing on Left Side  
Paddle Beater  
50 hrs.  
1 Zerk

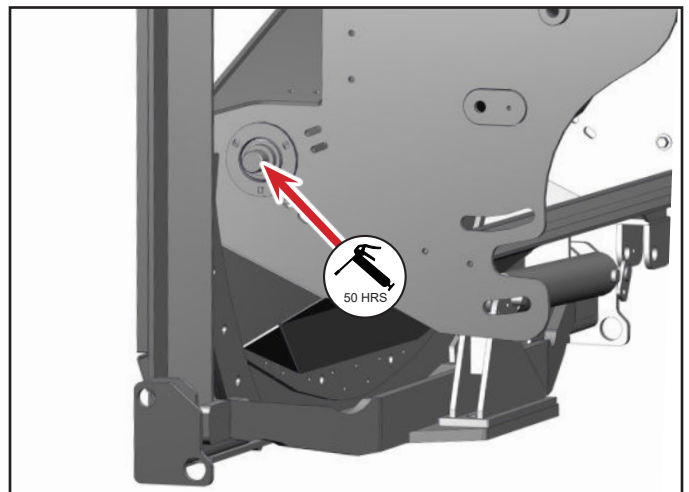


Transition Pivot Pin  
50 hrs.  
1 Zerk

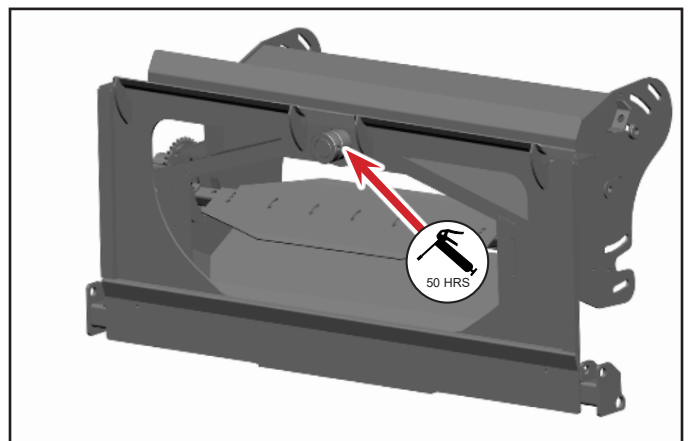


## Beaterless Transition

Slave Cylinder Rod End  
1 zerk  
50 hrs.

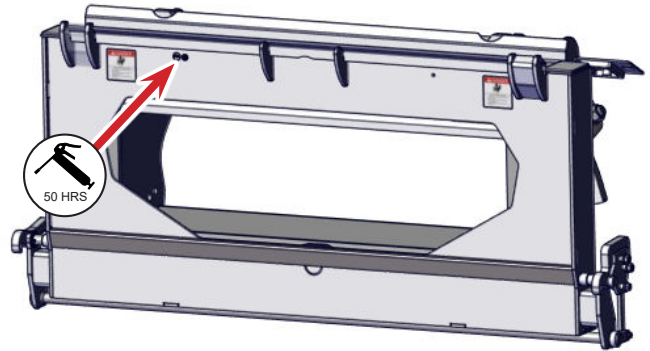

Slave Cylinder Barrell End and Pivot Pin  
2 zerks  
50 hrs

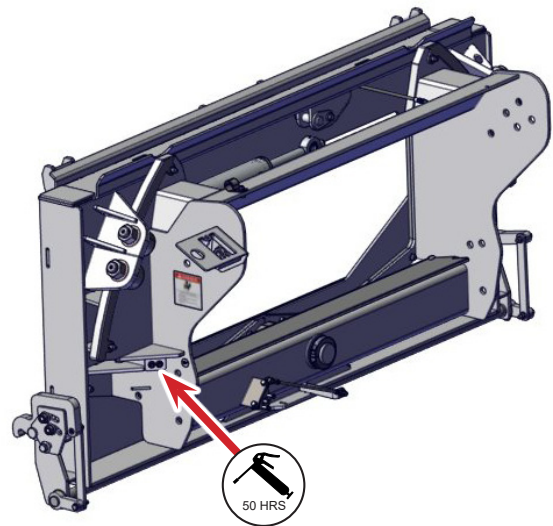

## Fasteners

### Check Bolt Tightness

After the first 10 hours of operation

Every season

The following bolts are torqued to special specifications because of the application in which they are used:

Transmission Mounting Bolts: Case IH® torque specifications  
(Medium Strength Loctite is Used on These Bolts, Check for Looseness ONLY)

Final Drive Housing Bolts: Case IH® torque specifications  
(Medium Strength Loctite is Used on These Bolts, Check for Looseness ONLY)

Drive Wheel Hub Bolts: Case IH® torque specifications

Steering Wheel Hub Bolts: Case IH® torque specifications

### **Notice**







Consult your Case IH 7250, 8250 and 9250 Operator's Manual to verify that correct bolts and spacers are used for the Rear Wheel Application.

The following two pages shows torque charts for metric and standard fasteners. Use these charts for checking torques on bolts not shown above.

# Metric Torque Chart

## SI Bolt and Cap Screw Torque Values

(For Hillco Leveling Systems Only)
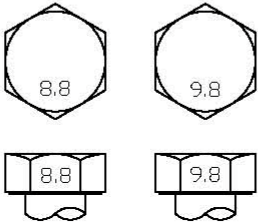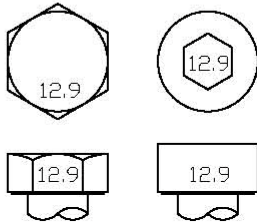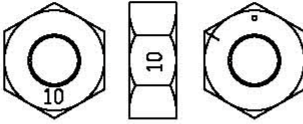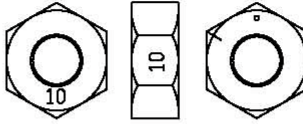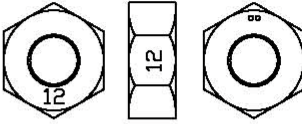
<b>Property Class and Head Markings</b>			
<b>Property Class and Nut Markings</b>			

SIZE	Class 8.8 or 9.8				Class 10.9				Class 12.9			
	Lubricated(1)		Dry(2)		Lubricated(1)		Dry(2)		Lubricated(1)		Dry(2)	
	N*m	lb-ft	N*m	lb-ft	N*m	lb-ft	N*m	lb-ft	N*m	lb-ft	N*m	lb-ft
M6	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	22	16	28	20	32	24	40	30	37	28	47	35
M10	43	32	55	40	63	47	80	60	75	55	95	70
M12	75	55	95	70	110	80	140	105	130	95	165	120
M14	120	88	150	110	175	130	225	165	205	150	260	190
M16	190	140	240	175	275	200	350	255	320	240	400	300
M18	260	195	330	250	375	275	475	350	440	325	560	410
M20	375	275	475	350	530	400	675	500	625	460	800	580
M22	510	375	650	475	725	540	925	675	850	625	1075	800
M24	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	1300	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500










(1) "Lubricated" Means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.

(2) "Dry" means plain or zinc plated without any lubrication.

## Standard Torque Chart

# Unified Inch Bolt and Cap Screw Torque Values

(For Hillco Leveling Systems Only)

<b>SAE Grade and Head Markings</b>	  	 
<b>SAE Grade and Nut Markings</b>	 	 

SIZE	Grade 5, 5.1, or 5.2				Grade 8 or 8.2			
	Lubricated(1)		Dry(2)		Lubricated(1)		Dry(2)	
	N*m	lb-ft	N*m	lb-ft	N*m	lb-ft	N*m	lb-ft
1/4	9.5	7	12	9	13.5	10	17	12.5
5/16	20	15	25	18	28	21	35	26
3/8	35	26	44	33	50	36	63	46
7/16	55	41	70	52	80	58	100	75
1/2	85	63	110	80	120	90	150	115
9/16	125	90	155	115	175	130	225	160
5/8	170	125	215	160	240	175	300	225
3/4	300	225	375	280	425	310	550	400
7/8	490	360	625	450	700	500	875	650
1	725	540	925	675	1050	750	1300	975
1-1/8	900	675	1150	850	1450	1075	1850	1350
1-1/4	1300	950	1650	1200	2050	1500	2600	1950
1-3/8	1750	1250	2150	1550	2700	2000	3400	2550
1-1/2	2250	1650	2850	2100	3600	2650	4550	3350

(1) "Lubricated" Means coated with a lubricant such as engine oil, or fasteners with phosphate and oil coatings.

(2) "Dry" means plain or zinc plated without any lubrication.

## Tire Inflation

Tire	Load Index	PSI
Drive (650/75R32) R1 & R3 Tread	175A8	46
Drive (650/65R38) 550 Tread	175A8	46
Drive (24.5R32) R3 Tread	6*	46
Steer (28LR-26) R1 & R3 Tread	173A8	36
Steer (28LR-26) 390 Tread	178A8	36
For all other steer tires see the combine's operator's manual for correct pressure		

All Hillside combines are required to follow the Wheel and Tire Association Standards which states that the tire pressure must be such that the tire has adequate load carrying capability for the maximum possible weight (counting head weight and full grain tank). Both under-inflation and over-inflation are detrimental to tire life. Don't reinflate a tire that has been run flat or when there is obvious or suspected damage to the tire or wheel components. Check the tire pressure weekly or after 50 hours of operation.



### WARNING

When inflating tires, use a clip on air chuck and extension hose long enough to allow you to stand to one side and NOT in front or over the tire assembly. Use a safety cage if available.




### WARNING

A tire can explode during inflation and cause serious injury or death. Never increase air pressure beyond 35 PSI to seat the bead on the rim. Replace a tire if it has a defect. Replace a wheel rim, which has cracks, wear or severe rust. Make sure that all the air is removed from a tire before removing the tire from the rim. Never use force on an inflated or partially inflated tire. Make sure the tire is correctly seated before inflating.

# Schematics

CH9030/CS9030 Electrical Leveling Schematic  
SN (22001-22999)

Reference the to from tables on the following pages to trace wires and what their function is.

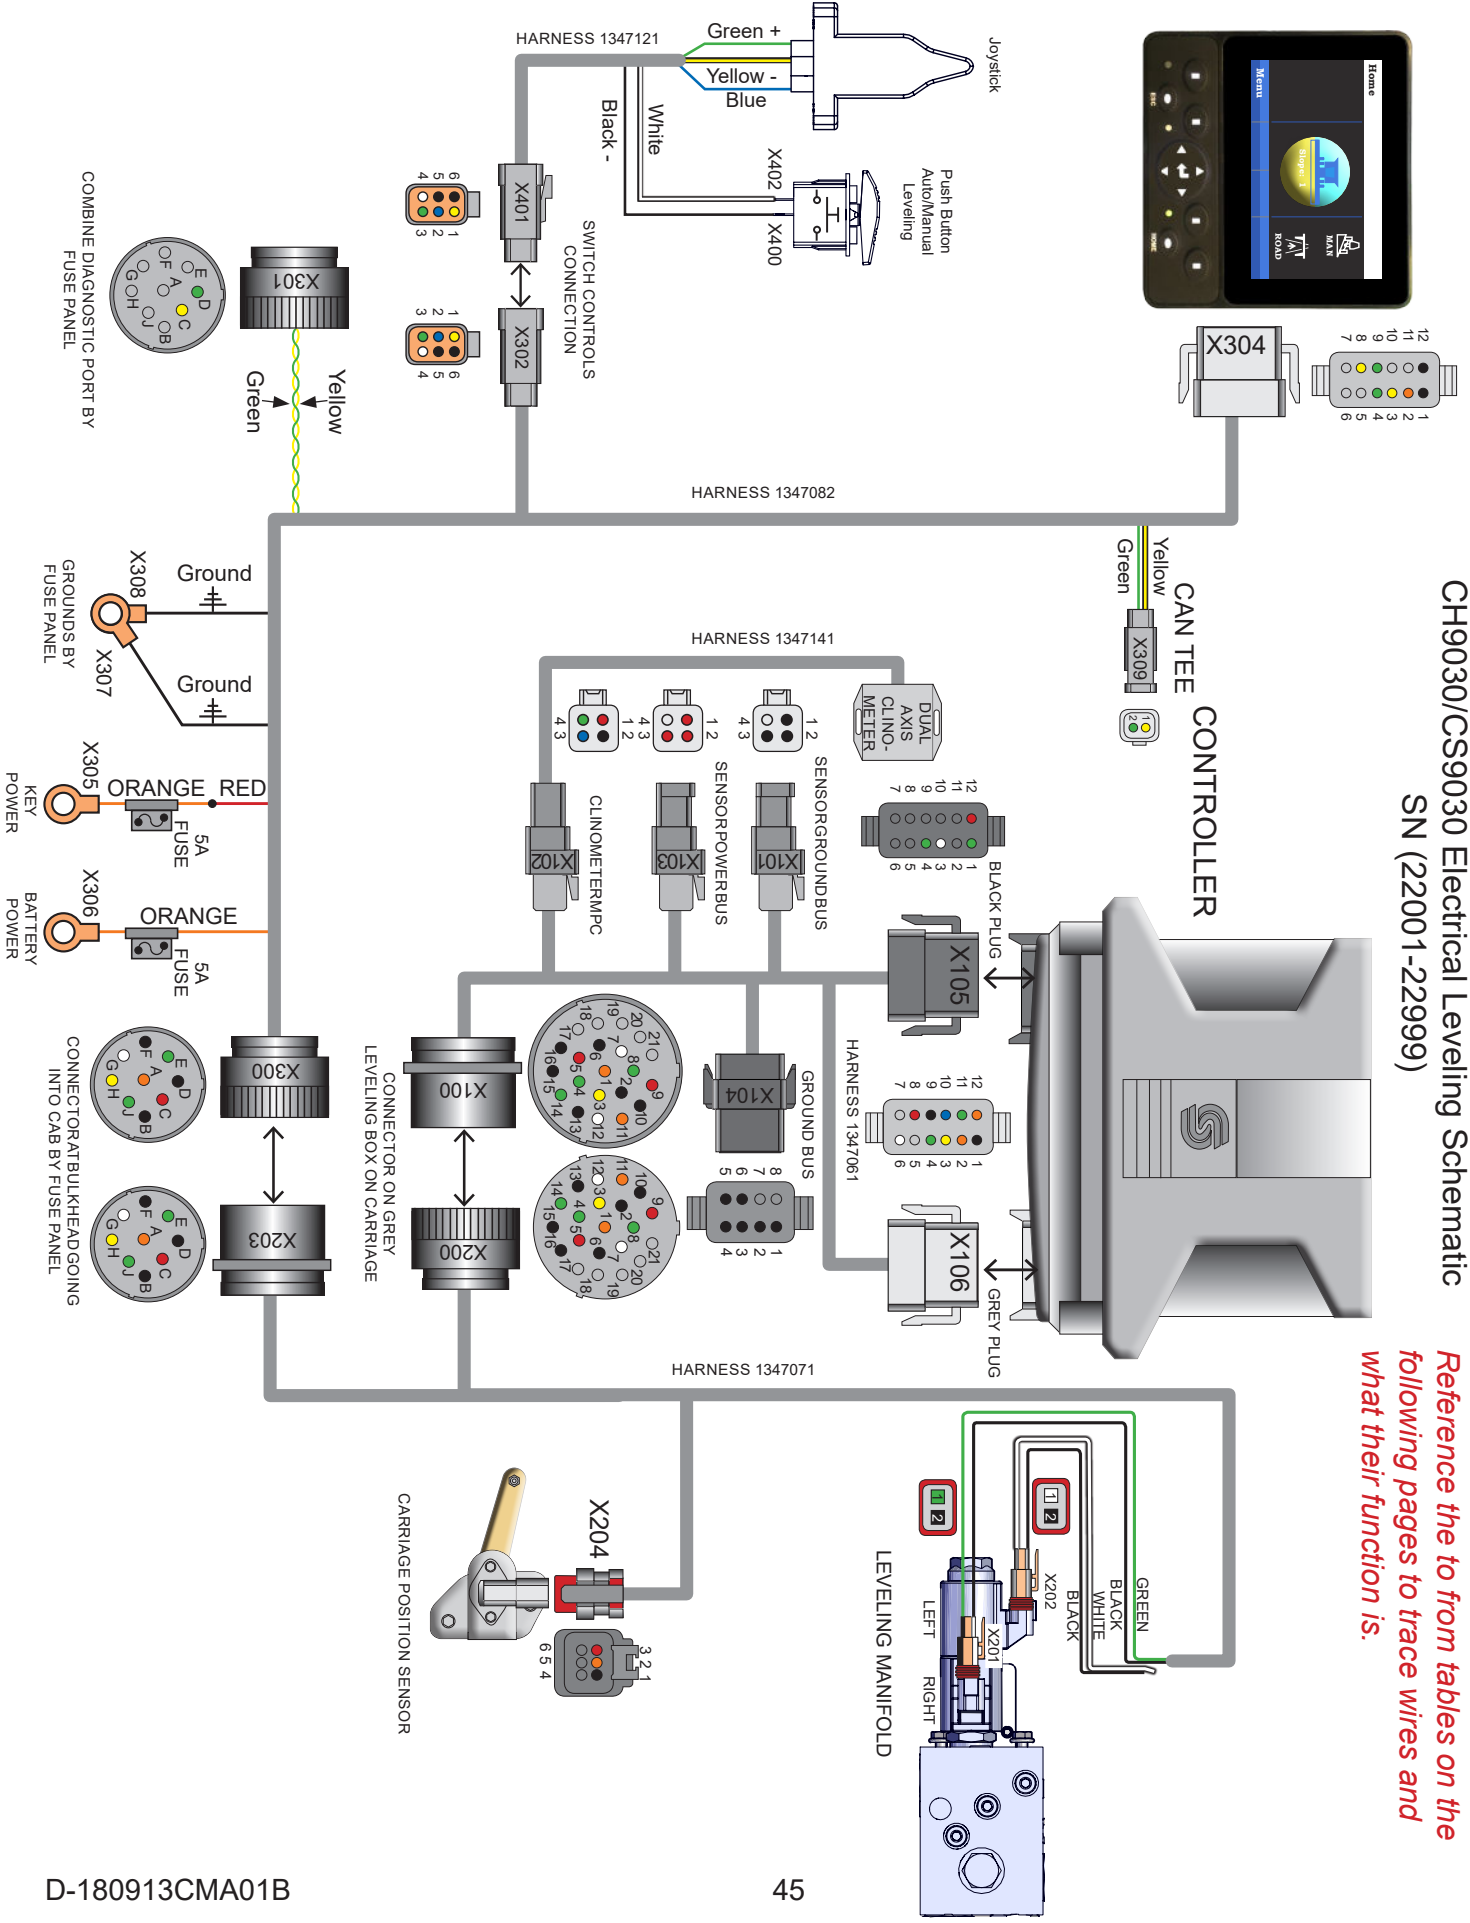

CH9030/CS9030 Electrical Leveling Schematic  
SN (22001-22999)

X100 - Box Bulkhead			To	
Pin	Wire Color	Description	Connector	Pin
1	Orange	Controller Power	X106	2
2	Black	Ground Bus Supply	X104	1
3	Yellow	CAN High	X106	3
4	Green	CAN Low	X106	4
5	Red	Joystick Power	X103	2
6	Black	Joystick Ground	X101	2
7	White	Auto Switch Signal	X106	6
8	Green	Joystick Signal	X105	1
9	Red	UC Sensor Power	X103	3
10	Black	UC Sensor Ground	X101	3
11	Orange	UC Sensor Signal	X106	12
12	White	Left Valve Power	X105	3
13	Black	Left Valve Ground	X104	4
14	Green	Right Valve Power	X105	4
15	Black	Right Valve Ground	X104	5
16	Black	Auto Switch Ground	X104	6
17	-	-	-	-
18	-	-	-	-
19	-	-	-	-
20	-	-	-	-
21	-	-	-	-

X104 - Ground Bus			To	
Pin	Wire Color	Description	Connector	Pin
1	Black	Ground Bus Supply	X100	2
2	Black	Controller Ground	X106	1
3	Black	Clinometer Ground	X102	2
4	Black	Left Valve Ground	X100	13
5	Black	Right Valve Ground	X100	15
6	Black	Auto Switch Ground	X100	16
7	-	-	-	-
8	-	-	-	-

X101 - Sensor Ground Bus				To	
Pin	Wire Color	Description	Connector	Pin	Pin
1	Black	Sensor Ground Supply	X106	9	9
2	Black	Joystick Ground	X100	6	6
3	Black	UC Sensor Ground	X100	10	10
4	-	-	-	-	-

X102 - Clinometer MPC				To	
Pin	Wire Color	Description	Connector	Pin	Pin
1	Red	Clinometer Power	X105	12	12
2	Black	Clinometer Ground	X104	3	3
3	Blue	Clinometer Left/Right Signal	X106	10	10
4	Green	Clinometer Fore/Aft Signal	X106	11	11

X103 - Sensor Power Bus				To	
Pin	Wire Color	Description	Connector	Pin	Pin
1	Red	Sensor Power Supply	X106	8	8
2	Red	Joystick Power	X100	5	5
3	Red	UC Power Supply	X100	9	9
4	-	-	-	-	-

X105 - Controller B Black Connector				To	
Pin	Wire Color	Description	Connector	Pin	Pin
1	Green	Joystick Signal	X100	8	8
2	-	-	-	-	-
3	White	Left Valve Power	X100	12	12
4	Green	Right Valve Power	X100	14	14
5	-	-	-	-	-
6	-	-	-	-	-
7	-	-	-	-	-
8	-	-	-	-	-
9	-	-	-	-	-
10	-	-	-	-	-
11	-	-	-	-	-
12	Red	Clinometer Power	X102	1	1



CH9030/CS9030 Electrical Leveling Schematic  
 SN (22001-22999)

X106 - Controller A Grey Connector			X200 - Box Bulkhead		
Pin	Wire Color	Description	Pin	Wire Color	Description
1	Black	Clinometer Ground	1	Orange	Controller Power
2	Orange	Controller Power	2	Black	Controller Ground
3	Yellow	CAN High	3	Yellow	CAN High
4	Green	CAN Low	4	Green	CAN Low
5	-	-	5	Red	Joystick Power
6	White	Auto Switch Signal	6	Black	Joystick Ground
7	-	-	7	White	Auto Switch Signal
8	Red	Sensor Power Supply	8	Green	Joystick Signal
9	Black	Sensor Ground Supply	9	Red	UC Sensor Power
10	Blue	Clinometer Left/Right Signal	10	Black	UC Sensor Ground
11	Green	Clinometer Fore/Aft Signal	11	Orange	UC Sensor Signal
12	Orange	UC Sensor Signal	12	White	Left Valve Power
X201 - Right Valve			X204 - UC Sensor		
Pin	Wire Color	Description	Pin	Wire Color	Description
1	Green	Right Valve Power	1	Black	UC Sensor Ground
2	Black	Right Valve Ground	2	Orange	UC Sensor Signal
X202 - Left Valve			X204 - UC Sensor		
Pin	Wire Color	Description	Pin	Wire Color	Description
1	White	Left Valve Power	1	Black	UC Sensor Ground
2	Black	Left Valve Ground	2	Red	UC Sensor Power

X106 - Controller A Grey Connector			X200 - Box Bulkhead		
Pin	Wire Color	Description	Pin	Wire Color	Description
1	Black	Clinometer Ground	1	Orange	Controller Power
2	Orange	Controller Power	2	Black	Controller Ground
3	Yellow	CAN High	3	Yellow	CAN High
4	Green	CAN Low	4	Green	CAN Low
5	-	-	5	Red	Joystick Power
6	White	Auto Switch Signal	6	Black	Joystick Ground
7	-	-	7	White	Auto Switch Signal
8	Red	Sensor Power Supply	8	Green	Joystick Signal
9	Black	Sensor Ground Supply	9	Red	UC Sensor Power
10	Blue	Clinometer Left/Right Signal	10	Black	UC Sensor Ground
11	Green	Clinometer Fore/Aft Signal	11	Orange	UC Sensor Signal
12	Orange	UC Sensor Signal	12	White	Left Valve Power
X201 - Right Valve			X204 - UC Sensor		
Pin	Wire Color	Description	Pin	Wire Color	Description
1	Green	Right Valve Power	1	Black	UC Sensor Ground
2	Black	Right Valve Ground	2	Orange	UC Sensor Signal
X202 - Left Valve			X204 - UC Sensor		
Pin	Wire Color	Description	Pin	Wire Color	Description
1	White	Left Valve Power	1	Black	UC Sensor Ground
2	Black	Left Valve Ground	2	Red	UC Sensor Power

CH9030/CS9030 Electrical Leveling Schematic  
SN (22001-22999)

FROM - TO TABLE									
FROM					TO				
WIRE CODE	WIRE COLOR	WIRE SIZE	CONNECTOR #	PIN	CONNECTOR #	PIN	DESCRIPTION	LENGTH	
F1	RED	GXL-12GA	X306	1	J1		BATTERY POWER FUSE	N/A	
F2	ORANGE	GXL-12GA	X305	1	J2		KEYED POWER FUSE	N/A	
3002	BLACK	GXL-18GA	X304	1	X307	1	DISPLAY GROUND	157	
3003	YELLOW	GXL-20GA	X304	3	X300	H	CAN0 HIGH	165	
3004	GREEN	GXL-20GA	X304	4	X300	J	CAN0 LOW	165	
3005	BLACK	GXL-18GA	X308	1	X300	B	CONTROLLER GROUND	24	
3006	RED	GXL-18GA	X302	1	X300	C	JOYSTICK POWER	133	
3007	BLACK	GXL-18GA	X302	2	X300	D	JOYSTICK GROUND	133	
3008	GREEN	GXL-18GA	X302	3	X300	E	JOYSTICK SIGNAL	133	
3009	WHITE	GXL-18GA	X302	4	X300	G	AUTO SWITCH SIGNAL	133	
3010	BLACK	GXL-18GA	X302	5	X300	F	AUTO SWITCH GROUND	133	
3011	YELLOW	GXL-20GA	X304	8	X301	C	CAN1 HIGH	160	
3012	GREEN	GXL-20GA	X304	9	X301	D	CAN1 LOW	160	
3013	YELLOW	GXL-20GA	J3		X309	1	CAN0 HIGH TEE	3	
3014	GREEN	GXL-20GA	J4		X309	2	CAN0 LOW TEE	3	
3016	ORANGE	GXL-18GA	X304	3	X300	A	KEYED POWER	165	
3017	BLACK	GXL-20GA	X304	12	X302	6	ALARM GROUND	47	

X300 - CAB BULKHEAD									
					DEUTSCH				
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	TERMINAL/PLUG	SEAL	TERMINAL/PLUG	SEAL	TERMINAL/PLUG	SEAL
A	3016	ORANGE	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
B	3005	BLACK	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
C	3006	RED	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
D	3007	BLACK	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
E	3008	GREEN	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
F	3010	BLACK	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
G	3009	WHITE	GXL-18GA	0462-201-16141		0462-201-16141		0462-201-16141	
H	3003	YELLOW	GXL-20GA	0462-201-16141		0462-201-16141		0462-201-16141	
J	3004	GREEN	GXL-20GA	0462-201-16141		0462-201-16141		0462-201-16141	
ACCESSORIES									

X301 - DAIGNOSTIC MPC									
					DEUTSCH				
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	TERMINAL/PLUG	SEAL	TERMINAL/PLUG	SEAL	TERMINAL/PLUG	SEAL
A									
B									
C	3011	YELLOW	GXL-20GA			0462-201-16141		0462-201-16141	
D	3012	GREEN	GXL-20GA			0462-201-16141		0462-201-16141	
E									
F									
G									
H									
J									
ACCESSORIES									

CH9030/CS9030 Electrical Leveling Schematic  
SN (22001-22999)

X302 - SWITCH BOX					DTM04-6P	
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG	
1	3006	RED	GXL-18GA		0460-010-20141	
2	3007	BLACK	GXL-18GA		0460-010-20141	
3	3008	GREEN	GXL-18GA		0460-010-20141	
4	3009	WHITE	GXL-18GA		0460-010-20141	
5	3010	BLACK	GXL-18GA		0460-010-20141	
6	3017	BLACK	GXL-18GA		0460-010-20141	
ACCESSORIES						
1	WEDGELOCK					WM-6P

X305 - KEYED POWER					
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG
1	F2	ORANGE	GXL-18GA		3/8 RING
ACCESSORIES					

LABEL TERMINAL \*KEY +\*

X306 - BATTERY POWER					
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG
1	F1	RED	GXL-18GA		3/8 RING
ACCESSORIES					

LABEL TERMINAL \*BAT +\*

X307 - DISPLAY GROUND					
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG
1	3002	BLACK	GXL-18GA		5/16 RING
ACCESSORIES					

X308 - CONTROLLER GROUND					
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG
A	3005	BLACK	GXL-18GA		5/16 RING
ACCESSORIES					

X400 - Auto Switch Signal			To	
Pin	Wire Color	Description	Connector	Pin
1	White	Auto Switch Signal	X401	4

X304 - DISPLAY A						DEUTSCH SEAL		DTM06-12SA		
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG					
1	3002	BLACK	GXL-18GA		0462-005-20141					
2	3016	ORANGE	GXL-18GA		0462-005-20141					
3	3003	YELLOW	GXL-20GA		0462-201-20141					
4	3004	GREEN	GXL-20GA		0462-201-20141					
5										
6										
7										
8	3011	YELLOW	GXL-20GA		0462-201-20141					
9	3012	GREEN	GXL-20GA		0462-201-20141					
10										
11										
12	3017	BLACK	GXL-20GA		0462-201-20141					
ACCESSORIES										
1	WEDGELOCK									WM-12S

X309 - CAN TEE					DEUTSCH SEAL		DTM04-2P		
PIN	WIRE CODE	WIRE COLOR	WIRE SIZE	DEUTSCH SEAL	TERMINAL/PLUG				
1	3013	YELLOW	GXL-20GA		0460-202-20141				
2	3014	GREEN	GXL-20GA		0460-202-20141				
ACCESSORIES									
1	WEDGELOCK								WM-2PB


X401 - Switch Box				To	
Pin	Wire Color	Description	Connector	Pin	
1	Yellow	Joystick Power	Joystick Pigtail		
2	Blue	Joystick Ground			
3	Green	Joystick Signal			
4	White	Auto Switch Signal		400	1
5	Black	Auto Switch Ground		402	1
6	-	-		-	-

X402 - Auto Switch Ground			To	
Pin	Wire Color	Description	Connector	Pin
1	Black	Auto Switch Ground	X401	5

# Model CH9020/CH9030/CS9030 Leveling Hydraulic Schematic

FOR ALL 7230, 7240, 7250, 8230, 8240, 8250, 9230, 9240, & 9250 Case-IH Combines

HILLCO S/N 22001 Thru 22999

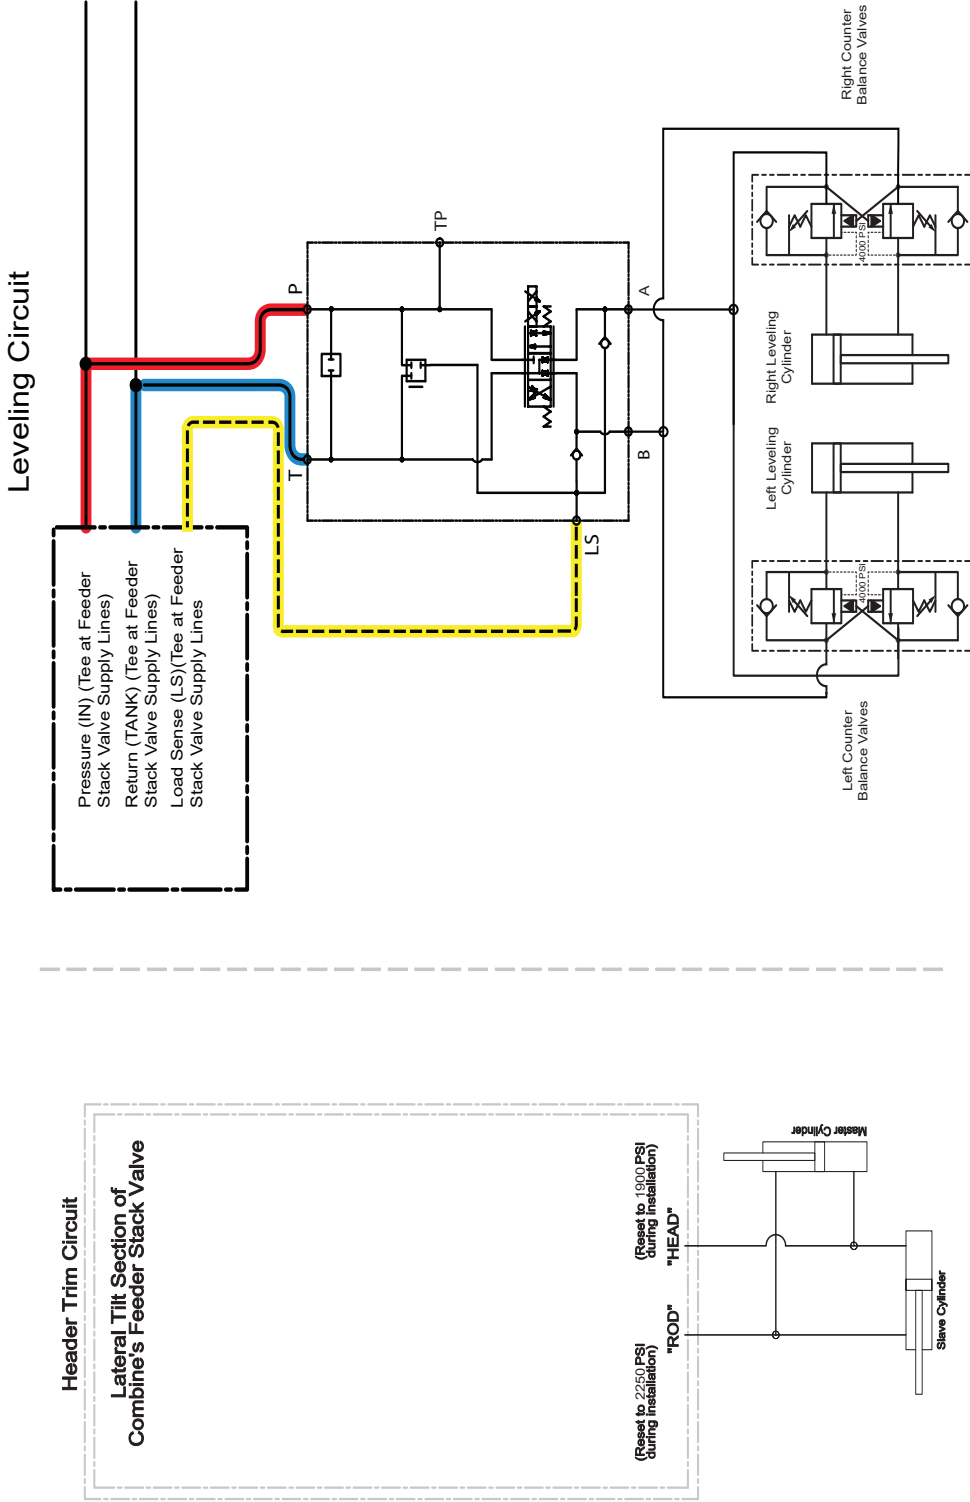

## Notes